

NOTEBOOK

REFERENCEGUIDE



Contents

Chapter 1: About This Reference	1
About this guide	2
Accessing your online User Guide	2
Gateway contact information	2
Contacting Gateway Customer Care	2
Gateway model and serial number	3
Microsoft Certificate of Authenticity	3
For more information	3
 Chapter 2: Checking Out Your Notebook ...	5
Front	6
Left	6
Right	8
Back	9
Bottom	10
Keyboard area	11
LCD panel	13
 Chapter 3: Setting Up and Getting Started.	15
Working safely and comfortably	16
Reducing eye strain	16
Setting up your computer desk and chair	17
Sitting at your notebook	17
Avoiding discomfort and injury from repetitive strain	18
Connecting the AC adapter	18
Protecting from power source problems	20
Connecting to a broadband modem or network ..	20
Connecting the optional dial-up modem	21
Starting your notebook	23
Waking up your notebook	24
Turning off your notebook	24
Restarting (rebooting) your notebook	25
Using the status indicators	26

Using the keyboard	28
Key types	29
System key combinations	30
Using the EZ Pad touchpad	32
Using the touch panel	35
Using the webcam	36
Adjusting the brightness	37
Adjusting the volume	38
Turning your wireless radio on or off	40
IEEE 802.11 wireless network radio	40
Bluetooth radio	41
 Chapter 4: Using Drives and Accessories ...	43
Using the DVD drive	44
Identifying drive types	44
Using a DVD drive	45
Using the memory card reader	47
Memory card types	47
Inserting a memory card	47
Using a memory card	48
Removing a memory card	48
Installing a printer or other peripheral device ...	48
Connecting a USB device	49
Viewing the display on a projector, monitor, or television	50
Adjusting the display properties	52
Using the projector or monitor for a presentation	53
 Chapter 5: Managing Power	55
Monitoring the battery charge	56
Recharging the battery	56
Changing batteries	57
Extending battery life	58
Maximizing battery performance	58
Conserving battery power	58
Using alternate power sources	60
Changing power modes	60

Changing notebook power settings	62
Changing the power plan	62
Changing advanced settings	64
 Chapter 6: Traveling with Your Notebook .	67
Packing your notebook	68
Traveling by air	68
Dial-up modem	68
Radio frequency wireless connections	69
Security	70
Power	71
Additional tips	72
 Chapter 7: Maintaining Your Notebook . . .	73
Caring for your notebook	74
Cleaning your notebook	74
Cleaning the exterior	75
Cleaning the keyboard	75
Cleaning the notebook screen	76
Maintaining the battery	76
Storing batteries	77
Cleaning CDs or DVDs	77
Recovering your system	78
Creating recovery discs	79
Recovering pre-installed software and drivers . .	81
Returning to a previous system condition	82
Returning your system to its factory condition .	84
 Chapter 8: Troubleshooting	87
Safety guidelines	88
First steps	88
Troubleshooting	89
Audio	89
Battery	89
CD drives	89
Diskette drive (external)	90
Display	91
DVD drives	92

Ethernet	93
File management	94
Hard drive	94
Internet	95
Keyboard	96
Media Center	97
Memory	100
Memory card reader	101
Modem (cable or DSL)	101
Modem (dial-up)	101
Mouse	105
Networks (wired)	106
Networks (wireless)	108
Passwords	110
Power	111
Printer	111
Sound	113
Status indicators	113
Touchpad	114
Video	114
Telephone support	114
Before calling Gateway Customer Care	114
Appendix A: Legal Information.....	117
Index	129

CHAPTER 1

About This Reference

- [About this guide](#)
- [Accessing your online User Guide](#)
- [Gateway contact information](#)
- [Microsoft Certificate of Authenticity](#)
- [For more information](#)

About this guide

This guide includes information and maintenance instructions that are specific to your model of Gateway notebook. For all other notebook information, see your online *User Guide*.

Accessing your online User Guide

In addition to this guide, your online *User Guide* has been included on your hard drive. Your *User Guide* is an in-depth, easy-to-read manual that includes information on the following topics:

- Help and technical support
 - Using and customizing Windows and other software
 - Using the Internet
 - Protecting your files
 - Playing and recording media
 - Networking
- To access your online *User Guide*:
- Click Ⓜ (Start), All Programs, then click Gateway Documentation.

Gateway contact information

Contacting Gateway Customer Care

Your *Setup Guide* contains information about contacting Gateway Customer Care.

Gateway model and serial number

A label on the bottom of your notebook contains information that identifies your notebook model and its features. Gateway Customer Care will need this information if you call for assistance.

Microsoft Certificate of Authenticity



Important

The label shown in this section is for informational purposes only. Label information varies by model, features ordered, and location.

The Microsoft Certificate of Authenticity label found on the bottom of your notebook includes the product key code for your operating system.



For more information

For more information about your notebook, visit Gateway's *Support* page at www.gateway.com or the Web address shown on your notebook's label. The *Support* page also has links to additional Gateway documentation and detailed specifications.

CHAPTER2

Checking Out Your Notebook


- Front
- Left
- Right
- Back
- Bottom
- Keyboard area
- LCD panel







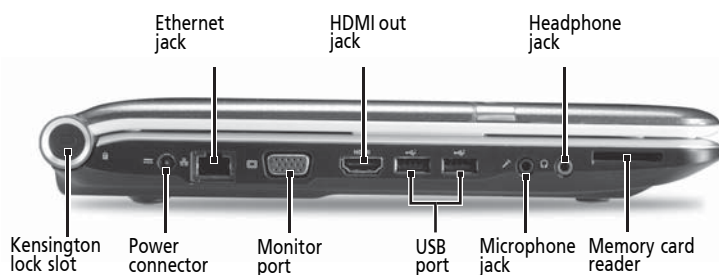

Front




Component	Icon	Description
Ventilation fan		<p>Helps cool internal components.</p> <p>Warning: Do not work with the notebook resting on your lap. If the air vents are blocked, the notebook may become hot enough to harm your skin.</p> <p>Caution: Do not block or insert objects into these slots. If these slots are blocked, your notebook may overheat resulting in unexpected shutdown or permanent damage to the notebook.</p> <p>Caution: Provide adequate space around your notebook so air vents are not obstructed. Do not use the notebook on a bed, sofa, rug, or other similar surface.</p>




Left



Component	Icon	Description
Kensington™ lock slot		Secure your notebook to an object by connecting a Kensington cable lock to this slot.
Power connector		Plug the AC adapter cable into this connector.
Ethernet jack		Plug an Ethernet network cable into this jack. Plug the other end of the cable into a cable modem, DSL modem, or an Ethernet network jack. For more information, see "Connecting to a broadband modem or network" on page 20 .
Monitor port		Plug an analog VGA monitor or projector into this port. For more information, see "Viewing the display on a projector, monitor, or television" on page 50 .
HDMI out jack	HDMI	Plug an HDMI device, such as a high definition television, into this optional jack. For more information, see "Viewing the display on a projector, monitor, or television" on page 50 .
USB port		Plug USB devices (such as a diskette drive, flash drive, printer, scanner, camera, keyboard, or mouse) into these ports.
Microphone jack		Plug a microphone into this jack.
Headphone jack		Plug amplified speakers or headphones into this jack. The built-in speakers are turned off when speakers or headphones are plugged into this jack. • Headphone with SPDIF support
Memory card reader		Insert a memory card from a digital camera, MP3 player, PDA, or cellular telephone into the memory card reader. For more information, see "Using the memory card reader" on page 47 . The memory card reader supports Memory Stick®, Memory Stick Pro®, MultiMediaCard™, Secure Digital™, and xD-Picture Card™ cards.

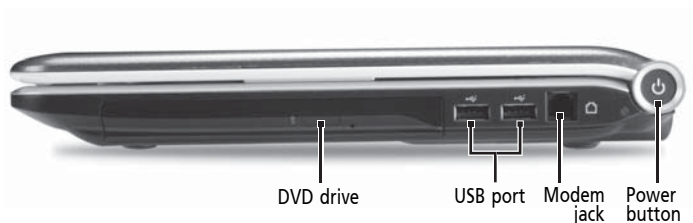Right




Component	Icon	Description
USB port		Plug a USB device (such as a diskette drive, flash drive, printer, scanner, camera, keyboard, or mouse) into this port.
DVD drive		Insert CDs or DVDs into this drive. For more information, see “Using the DVD drive” on page 44 . To determine the type of drive in your notebook, examine the drive tray’s plastic cover and compare the logo to those listed in “Identifying drive types” on page 44 .
Modem jack		Plug a dial-up modem cable into this optional jack. For more information, see “Connecting the optional dial-up modem” on page 21 .
Power button		Press to turn the power on or off. You can also configure the power button for Sleep/Resume mode. For more information on configuring the power button mode, see “Changing advanced settings” on page 64 .




Back




Component	Icon	Description
Ventilation fan		<p>Helps cool internal components.</p> <p>Warning: Do not work with the notebook resting on your lap. If the air vents are blocked, the notebook may become hot enough to harm your skin.</p> <p>Caution: Do not block or insert objects into these slots. If these slots are blocked, your notebook may overheat resulting in unexpected shutdown or permanent damage to the notebook.</p> <p>Caution: Provide adequate space around your notebook so air vents are not obstructed. Do not use the notebook on a bed, sofa, rug, or other similar surface.</p>

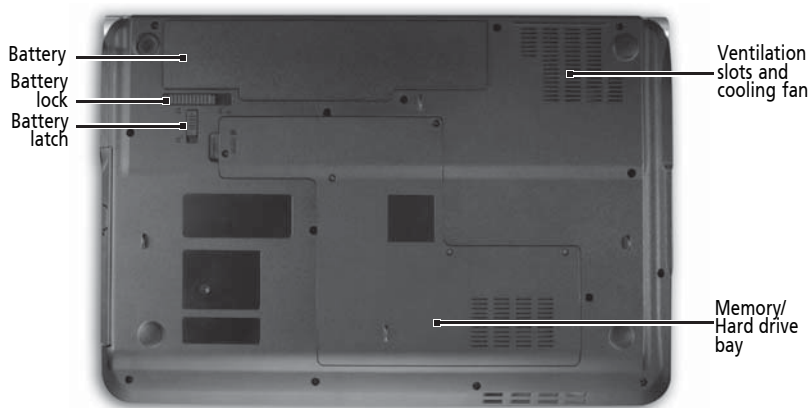Bottom






Component	Icon	Description
Battery		Provides power when the notebook is not plugged into AC power.
Battery lock		Slide to unlock the battery. For more information, see “Changing batteries” on page 57 .
Battery latch		Slide to release the battery. For more information, see “Changing batteries” on page 57 .
Memory bay		Memory modules are located in this bay.

Component	Icon	Description
Hard drive bay		The hard drive is located in this bay.
Ventilation slots and cooling fan		<p>Helps cool internal components.</p> <p>Warning: Do not work with the notebook resting on your lap. If the air vents are blocked, the notebook may become hot enough to harm your skin.</p> <p>Caution: Do not block or insert objects into these slots. If these slots are blocked, your notebook may overheat resulting in unexpected shutdown or permanent damage to the notebook.</p> <p>Caution: Provide adequate space around your notebook so air vents are not obstructed. Do not use the notebook on a bed, sofa, rug, or other similar surface.</p>


Keyboard area

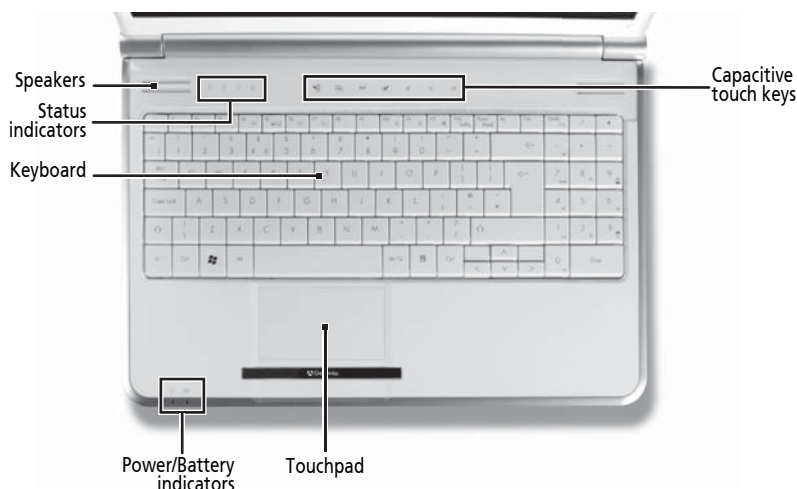Keyboard area for select models



Component	Icon	Description
Speakers		Left and right speakers deliver stereo audio output.
Status indicators		Inform you when a drive is in use or when a button has been pressed that affects how the keyboard is used. For more information, see "Using the status indicators" on page 26 .
Keyboard		Provides all the features of a full-sized, computer keyboard. For more information, see "Using the keyboard" on page 27 .
Power indicator		<ul style="list-style-type: none"> • LED on - Notebook is on. • LED blinking - Notebook is in Sleep or Hybrid Sleep mode. • LED off - Notebook is off.
Battery charge indicator		<ul style="list-style-type: none"> • LED orange - Battery is fully charged. • LED blinking orange - Battery is charging. • LED blinking red - Battery charge is very low. • LED solid red - Battery is malfunctioning. <p>Important: This LED only lights up when your notebook is connected to AC power or the battery charge is very low.</p>
Touchpad		Provides all the functionality of a mouse. For more information, see "Using the EZ Pad touchpad" on page 31 .
Capacitive touch keys		Press to access capacitive touch key function. For more information, see "Using the capacitive touch keys" on page 34 .

LCD panel

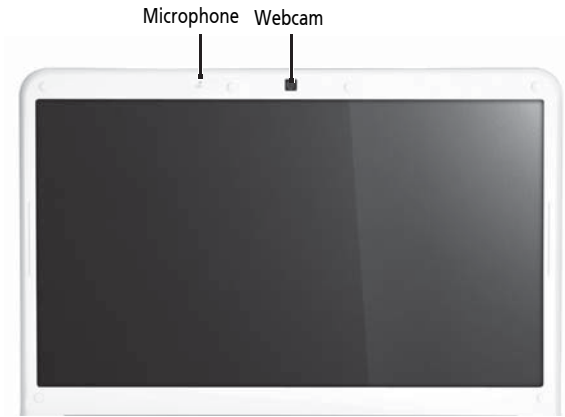

Component	Icon	Description
Webcam		Use to let others see who they are communicating with when making VoIP calls. For more information, see "Using the webcam" on page 36 .
Microphone		Use to talk through when making Voice over Internet Protocol (VoIP) calls.

CHAPTER 3

Setting Up and Getting Started

- Working safely and comfortably
- Connecting the AC adapter
- Connecting to a broadband modem or network
- Connecting the optional dial-up modem
- Starting your notebook
- Turning off your notebook
- Restarting (rebooting) your notebook
- Using the status indicators
- Using the keyboard
- Using the EZ Pad touchpad
- Using the capacitive touch keys
- Using the webcam
- Adjusting the brightness
- Adjusting the volume

Working safely and comfortably

Before using your notebook, follow these general guidelines for setting up a safe and comfortable work area and avoiding discomfort and strain:

- Keep hands and arms parallel to the floor.
- Adjust the screen so it is perpendicular to your line of sight.
- Place your feet flat on the floor or on a footrest.
- Although notebooks are sometimes called “laptops,” do not use your notebook while it rests on your *unprotected* lap. Notebook operating temperatures can become quite high, increasing the risk of burns to your legs. Instead, use a laptop desk to protect your legs.
- Do not use the notebook on any soft, conforming surface, such as your lap, a blanket, carpet, or a sofa. Soft surfaces can block your notebook’s ventilation openings, leading to overheating, permanent damage to your notebook, and fire danger. Instead, place your notebook on a rigid, hard surface, and make sure that you keep the ventilation openings on the sides clear.



Warning

Do not use your notebook on a soft surface, such as your lap, a blanket, carpet, or a sofa. You must keep your notebook’s ventilation openings clear of obstructions, or your notebook may overheat, increasing the risk of fire and personal injury.

Reducing eye strain

Sunlight or bright indoor lighting should not reflect on the screen or shine directly into your eyes.

- Position the computer desk and screen so you can avoid glare on your screen and light shining directly into your eyes. Reduce glare by installing shades or curtains on windows, and by installing a glare screen filter.
- Use soft, indirect lighting in your work area. Do not use your notebook in a dark room.

- Avoid focusing your eyes on your screen for long periods of time. Every 10 or 15 minutes, look around the room, and try to focus on distant objects.
- Where feasible, keep your head vertical while looking at the screen. If you use an external keyboard, raise the notebook so the top of its screen is no higher than eye level.

Setting up your computer desk and chair

When you are setting up your computer desk and chair, make sure that the desk is the appropriate height and the chair helps you maintain good posture.

- Select a flat surface for your computer desk.
- Adjust the height of the computer desk so your hands and arms are positioned parallel to the floor when you use the keyboard and touchpad. If the desk is not adjustable or is too tall, consider using an adjustable chair to control your arm's height above the keyboard.
- Use an adjustable chair that is comfortable, distributes your weight evenly, and keeps your body relaxed.
- Position your chair so the keyboard is at or slightly below the level of your elbow. This position lets your shoulders relax while you type.
- Adjust the chair height, adjust the forward tilt of the seat, or use a footrest to distribute your weight evenly on the chair and relieve pressure on the back of your thighs.
- Adjust the back of the chair so it supports the lower curve of your spine. You can use a pillow or cushion to provide extra back support.

Sitting at your notebook

- Avoid bending, arching, or angling your wrists. Make sure that they are in a relaxed position when you type.
- Do not slouch forward or lean far back. Sit with your back straight so your knees, hips, and elbows form right angles when you work.
- Take breaks to stand and stretch your legs.
- Avoid twisting your torso or neck.

Avoiding discomfort and injury from repetitive strain

- Vary your activities to avoid excessive repetition.
- Take breaks to change your position, stretch your muscles, and relieve your eyes.
- Find ways to break up the work day, and schedule a variety of tasks.

Connecting the AC adapter

You can run your notebook using an AC adapter or your notebook's battery. The battery was shipped to you partially charged. You should use the AC adapter right away to fully charge the battery. Allow three hours for the battery to fully charge.

► Power subsystem

19V DC, 65/90W AC adapter

► Temperature:

Operating: 5 °C ~ 35 °C

Non-operating: -20 °C ~ 65 °C



Warning

Do not attempt to disassemble the AC adapter. The AC adapter has no user-replaceable or user-serviceable parts inside. The AC adapter has dangerous voltages that can cause serious injury or death. Contact Gateway about returning defective AC adapters.



Caution

Make sure that you use the AC adapter that came with your notebook or one of the same type purchased from Gateway. Replace the power cord if it becomes damaged. The replacement cord must be of the same type and voltage rating as the original cord or your notebook may be damaged.



Important

If the battery is not fully charged before you use your notebook on battery power for the first time, the battery life may be much shorter than you expect. If the battery life seems short even after being charged for three hours, the battery may need to be recalibrated. For information on recalibrating the battery, see ["Extending battery life" on page 58](#).

► To connect the AC adapter:

- 1 Connect the power cord to the AC adapter.



- 2 Connect the AC adapter to your notebook's power connector.



- 3 Plug the power cord into a wall outlet. The battery charge indicator turns on (see ["Front" on page 6](#) for the location of the battery charge indicator). If the battery charge indicator does not turn on, complete the following steps until it turns on:
 - Unplug the adapter from your notebook, then plug it back in.
 - Press FN+F1 to toggle the status lights on and off.
 - Make sure the power cord is firmly attached to the AC adapter.
 - Plug the power cord into a different wall outlet.

- 4 When you finish using your notebook for the first time, turn off your notebook and leave your notebook connected to AC power until the battery charge indicator turns orange and stop blinking.

**Important**

If the battery charge indicator does not turn blue after three hours, contact Gateway Customer Care at the location shown on the Customer Care label. For more information, see [“Gateway contact information” on page 2](#).

Protecting from power source problems


During a power surge, the voltage level of electricity coming into your notebook can increase to levels far above normal levels and cause data loss or system damage. Protect your notebook and peripheral devices by connecting them to a *surge protector*, which absorbs voltage surges and prevents them from reaching your notebook.


**Warning**

High voltages can enter your notebook through both the power cord and the modem connection. To protect your notebook and avoid electrical shock, use a surge protector. If you have a telephone modem, use a surge protector that has a modem jack. If you have a cable modem, use a surge protector that has an antenna/cable TV jack. During an electrical storm, unplug both the surge protector and the modem.

Connecting to a broadband modem or network

Your notebook has a network jack that you can use to connect to a cable or DSL modem or to a wired Ethernet network.

- ▶ To connect to a cable or DSL modem or to a wired Ethernet network:
 - 1 Insert one end of the network cable into the network jack  on your notebook.

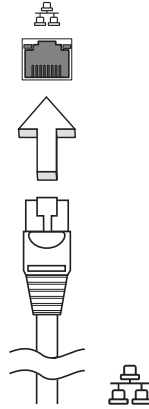

Tip

When using a cable with a sleeve over the plug, pull the sleeve back to make sure that the plug locks into the jack.

- 2 Insert the other end of the network cable into a cable modem, DSL modem, or Ethernet network jack.


Connecting the optional dial-up modem


Your notebook may have a built-in 56K modem that you can use to connect to a standard telephone line.



Warning

To reduce the risk of fire, use only No. 26 AWG or larger (for example, No. 24 AWG) UL-listed or CSA-certified telecommunication line cord for your dialup modem connection.

- To connect the optional modem:
- 1 Insert one end of the modem cable into the modem jack  on your notebook.

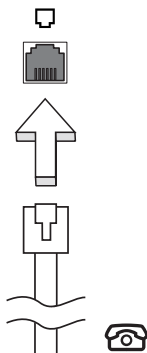

- 2 Insert the other end of the modem cable into a telephone wall jack.



Important

The modem will not work with digital or PBX telephone lines.

Starting your notebook



Warning

Do not work with the notebook resting on your lap. If the air vents are blocked, the notebook may become hot enough to harm your skin.



Caution

Provide adequate space around your notebook so air vents are not obstructed. Do not use the notebook on a bed, sofa, rug, or other similar surface.

► To start your notebook:

- 1 Lift the LCD panel.
- 2 Press the power button located above the keyboard.



Tip

For more information about changing the power button mode, see ["Changing advanced settings" on page 64](#).

- 3 If you are starting your notebook for the first time, follow the on-screen instructions to select the language and time zone and to create your first user account.

- 4 Attach and turn on any peripheral devices, such as printers, scanners, and speakers.

**Tip**

For more information about connecting peripheral devices, see [“Installing a printer or other peripheral device” on page 48](#).

**Tip**

See the documentation that came with each device for its setup instructions.

- 5 To open the main menu, click Ⓢ (Start). From that menu, you can run programs and search for files. For more information on using Windows, see “Using Windows” and “Customizing Windows” in your online *User Guide*.

Waking up your notebook

When you have not used your notebook for several minutes or if you close the LCD panel without turning off your notebook, it may enter a power-saving mode called *Sleep*. While in Sleep mode, the power indicator flashes. If your notebook is in Sleep mode, press the power button to “wake” it up.



**Tip**

For more information about Sleep mode, see [“Changing power modes” on page 60](#).

Turning off your notebook

Putting your notebook into Sleep mode is the easiest way to power down your notebook. Although it does not turn your notebook completely off, it turns off or slows down most system operations to save power. Sleep mode saves your desktop layout so the next time you restore power, the programs are laid out just as you left them. Waking your notebook from a Sleep state is much faster than turning on your notebook after it has been turned completely off.



Hibernate mode is an alternative to Sleep mode. In Hibernate mode, your notebook is turned completely off. When you wake your notebook from Hibernate mode, however, the programs that were running when your notebook entered Hibernate mode are running just as you left them.

- ▶ To put your notebook to sleep:
 - Click  (Start), then click  (power). The notebook saves your session and partially shuts down to save power.
- OR-
- Press FN+F3.



Tip

You can change the Sleep mode from the standard Sleep mode (default) to Hybrid Sleep. For more information about Sleep mode, see ["Changing power modes" on page 60](#).

- ▶ To put your notebook into hibernation:
 - Click  (Start), click the arrow next to the lock icon, then click Hibernate. The notebook saves your session and shuts down to save power.
- ▶ To turn off your notebook:
 - Click  (Start), click the arrow next to the lock icon, then click Shut Down. The notebook turns off.



Important

If for some reason you cannot use the Shut Down option in Windows to turn off your notebook, press and hold the power button for about five seconds, then release it.

Restarting (rebooting) your notebook

If your notebook does not respond to keyboard, touchpad, or mouse input, you may have to close programs that are not responding. If closing unresponsive programs does not restore your notebook to normal operation, you may have to restart (reboot) your notebook.

- ▶ To close unresponsive programs on your notebook:
 - 1 Press CTRL+ALT+DEL.
 - 2 Click Start Task Manager. The *Windows Task Manager* dialog box opens.
 - 3 Click the program that is not responding.
 - 4 Click End Task.
 - 5 Click X in the top-right corner of the *Windows Task Manager* dialog box.

- To restart your notebook:
- Click Ⓑ (Start), click the arrow next to the lock icon, then click Restart. The notebook turns off, then turns on again.



Important

If your notebook does not turn off immediately, complete the following steps until the notebook turns off:

1. Press and hold the power button for about five seconds, then release it.
2. Unplug the power cord and remove the battery for more than 10 seconds.


Using the status indicators







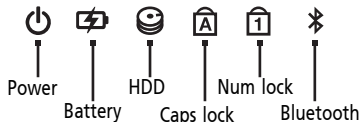

Important

If none of the indicators are on, you may need to press FN+F1 to toggle the status indicators on.

Status indicators inform you when a drive is being used or when a button has been pressed that affects how the keyboard is used. The status indicators are located below the screen.




Indicator	Icon	Description
Bluetooth		<ul style="list-style-type: none"> • LED on - Bluetooth communication is turned on. • LED off - Bluetooth communication is turned off.
Hard drive		<ul style="list-style-type: none"> • LED blinking - The drive is being accessed. • LED off - The drive is not being accessed.
Num lock		<ul style="list-style-type: none"> • LED on - Num lock is turned on. • LED off - Num lock is turned off.

Indicator	Icon	Description
Caps lock		<ul style="list-style-type: none"> LED on - Caps lock is turned on. LED off - Caps lock is turned off.
Battery charge indicator		<ul style="list-style-type: none"> LED blue - Battery is fully charged. LED red - Battery is charging. <p>Important: This LED only lights up when your notebook is connected to AC power.</p>
Power indicator		<ul style="list-style-type: none"> LED on - Notebook is on. LED blinking - Notebook is in Sleep or Hybrid Sleep mode. LED off - Notebook is off.

Using the keyboard

Your notebook features a full-size keyboard that functions the same as a desktop computer keyboard. Many of the keys have been assigned alternate functions, including shortcut keys for Windows, function keys for specific system operations, and the Num Lock keys for the numeric keypad.

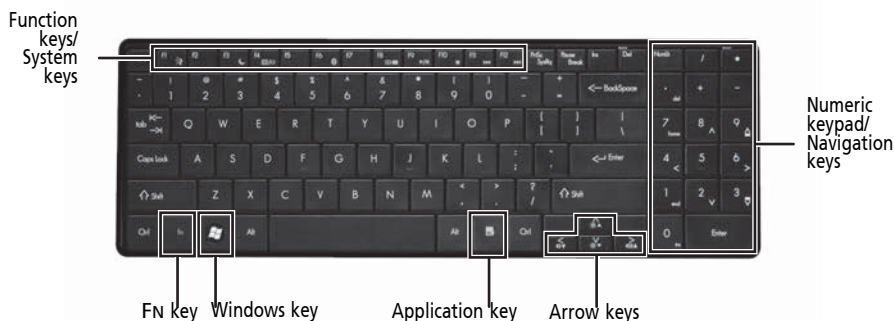



Tip

You can attach an external keyboard to the notebook using a USB port. You do not need to shut down the notebook to connect a USB keyboard.

Key types

The keyboard has several different types of keys. Some keys perform specific actions when pressed alone and other actions when pressed in combination with another key.

Key type	Icon	Description
Function keys		Press these keys labeled F1 to F12 to perform actions in programs. For example, pressing F1 may open help. Each program uses different function keys for different purposes. See the program documentation to find out more about the function key actions.
System keys		Press these colored keys in combination with the FN key to perform specific actions. For more information, see “System key combinations” on page 29 .
Navigation keys		Press these keys to move the cursor to the beginning of a line, to the end of a line, up the page, down the page, to the beginning of a document, or to the end of a document.
FN key		Press the FN key in combination with a colored system key to perform a specific action.
Windows key		Press this key to open the Windows Start menu. This key can also be used in combination with other keys to open utilities like F (Search utility), R (Run utility), and E (Computer window).
Application key		Press this key for quick access to shortcut menus and help assistants in Windows.
Arrow keys		Press these keys to move the cursor up, down, right, or left.

System key combinations

When you press the FN key and a system key at the same time, your notebook performs the action identified by the text or icon on the key.

Press and hold
FN, then press
this system key...

To...



Turn the capacitive touch key LEDs on or off. For more information, see ["Using the status indicators" on page 26.](#)



Enter Sleep mode or Hybrid Sleep mode. Press the power button to leave Sleep mode. For more information, see ["Changing notebook power settings" on page 62.](#)



Toggle the notebook display in the following order:

- The LCD
- An external monitor or projector (a monitor or projector must be plugged into the monitor port or HDMI port on your notebook)
- Both displays at the same time

For more information, see ["Viewing the display on a projector, monitor, or television" on page 50.](#)



Turn the optional Bluetooth radio on or off.

Warning: Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. Bluetooth communication devices are examples of devices that provide wireless communication.

Important: The wireless network switch must be in the ON position for this button to work. For more information, see ["Left" on page 6.](#)



Mute the sound. Press the key combination again to restore the sound. For more information, see ["Adjusting the volume" on page 37.](#)

Press and hold
FN, then press
this system key...

To...

F8



Turns the display screen backlight off to save power. Press any key to return.

F9



Play/ Pause—Plays or pauses the CD or DVD.

F10



Stop—Stops playing the CD or DVD.

F11



Previous—Skips back one CD track or DVD chapter.


F12




Next—Skips ahead one CD track or DVD chapter.

Using the EZ Pad touchpad

The EZ Pad™ consists of a touchpad, two buttons, and a scroll zone.

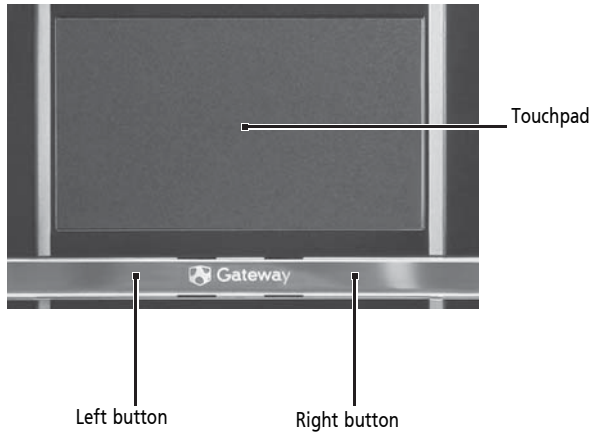

When you move your finger on the touchpad, the *pointer* (arrow) on the screen moves in the same direction. You can use the scroll zone to scroll through documents. Use of the scroll zone may vary from program to program.

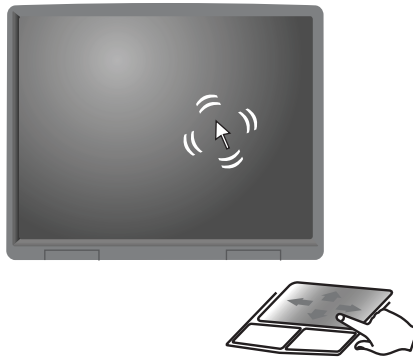

You can use the EZ-Pad *left* and *right* buttons below the touchpad to select objects.



Tip

You can attach a mouse to the notebook using a USB port. You do not need to shut down the notebook to connect a USB mouse.



Tip

For instructions on how to adjust the double-click speed, pointer speed, right-hand or left-hand configuration, and other touchpad settings, see "Changing the mouse, touchpad, or pointing device settings" in your online *User Guide*.




Tip

You may have received your notebook with the EZ Pad touchpad set to only accept clicking by using the touchpad buttons. You can change this feature to allow tapping on the touchpad to simulate clicking the left button. For more information, see "Changing the mouse, touchpad, or pointing device settings" in your online *User Guide*.

To...


Do this...

Move the pointer on the screen.



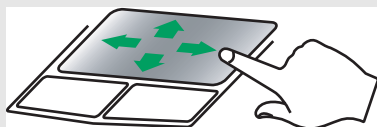


Move your finger around on the touchpad. If you run out of space and need to move the pointer farther, lift your finger, move it to the middle of the touchpad, then continue moving your finger.


Select an object on the screen.

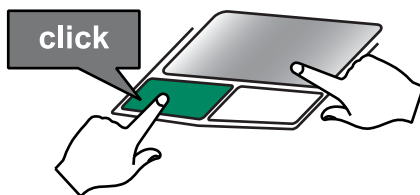



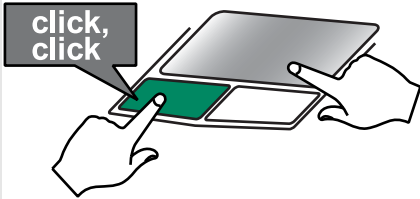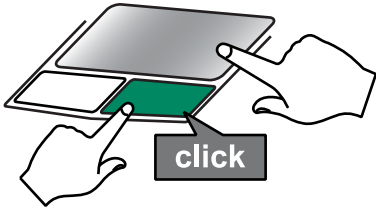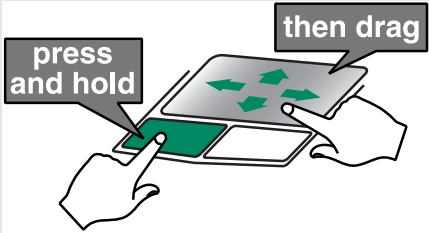

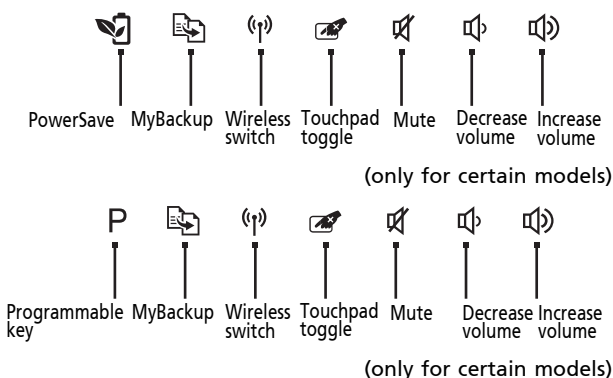


Position the pointer over the object. Quickly press and release the left button once. This action is called *clicking*.

To...	Do this...	
Start a program or open a file or folder.		Position the pointer over the object. Press the left button twice in rapid succession. This action is called <i>double-clicking</i> .
Access a shortcut menu or find more information about an object on the screen.		Position the pointer over the object. Quickly press and release the right button once. This action is called <i>right-clicking</i> .
Move an object on the screen.		Position the pointer over the object. Press the left button and hold it down, then use the touchpad to move (drag) the object to the appropriate part of the screen. Release the button to drop the object where you want it.

Using the capacitive touch keys




Button	Description
	PowerSave key—enable the Gateway PowerSave solution. The Gateway PowerSave solution uses the power-saving features of some sub-systems to reduce overall power consumption. When you press the Gateway PowerSave key, the screen brightness is reduced and the graphics chip switched to a lower speed; PCI and WLAN switch to power-saving modes. Press the Gateway PowerSave key again to return to your previous settings (only for certain models).
P	Programmable key—the programmable key will run the Launch Manager, you can assign an application as your needed. (only for certain models)
	MyBackup key—launch Gateway MyBackup solution. The Gateway MyBackup solution is a simple three-step process that allows you to create backup copies of your entire system or selected files and folders according to a schedule or as you need to.

Button	Description
	Wireless switch—turn the optional IEEE 802.11 wireless network radio on or off. For more information, see “Wireless Ethernet Networking” in your online <i>User Guide</i> . Warning: Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11 communication devices are examples of devices that provide wireless communication.
	Touchpad toggle—turn the internal touchpad on and off.
	Mute—mutes the sound. Press again to restore the sound. For more information, see “Adjusting the volume” on page 37 .
	Decrease volume—press to decrease volume. For more information, see “Adjusting the volume” on page 37 .
	Increase volume—press to increase volume. For more information, see “Adjusting the volume” on page 37 .

Using the webcam


You can use the webcam with many of the available Internet chat programs to add video and audio to your chat session. In addition, by using the software included with the webcam, you can take pictures or create video clips.

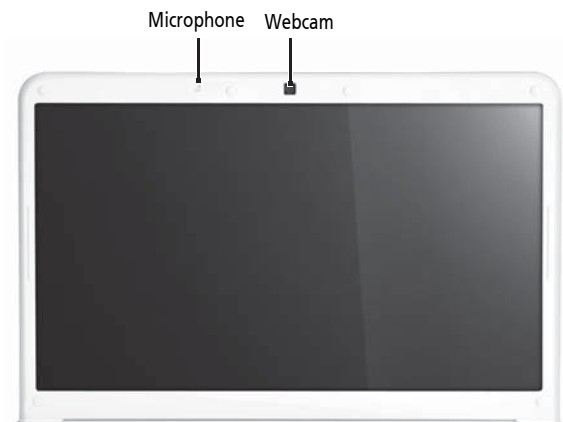

Adjusting the brightness

- ▶ To adjust screen brightness:
 - Use the increase brightness and decrease brightness keys on the keyboard. For more information, see [“System key combinations” on page 29](#).

-OR-

Click  (Start), All Programs, Accessories, then click Windows Mobility Center. The *Windows Mobility Center* window opens. Slide the Brightness control to the desired screen brightness.




Tip

For more information about the Windows Mobility Center, see “Using the Windows Mobility Center” in your online *User Guide*.

Adjusting the volume


You can use the volume control to adjust the overall volume of your notebook.


- ▶ To adjust the overall volume level using hardware controls:
 - If you are using external speakers, turn the knob on the front of the speakers.
- OR-
- Use the volume control buttons on the keyboard. For more information, see [“System key combinations” on page 29](#).
- OR-
- Use the mute button and capacitive volume control on the capacitive touch key. For more information, see [“Using the capacitive touch keys” on page 34](#).
- OR-
- Click  (Start), All Programs, Accessories, then click Windows Mobility Center. The *Windows Mobility Center* window opens. Slide the Volume control to the desired volume level.




Tip


For more information about the Windows Mobility Center, see “Using the Windows Mobility Center” in your online *User Guide*.

- ▶ To adjust the volume from Windows:
 - 1 Click  (Volume) on the taskbar. The volume control slider opens.

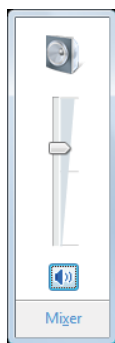

- 2 Click and drag the slider up to increase volume and down to decrease volume.

- 3 To mute the volume, click  (Mute). To restore volume, click it again.
- 4 To adjust device volume levels, click Mixer. The *Volume Mixer* dialog box opens, where you can click and drag sliders for individual devices.

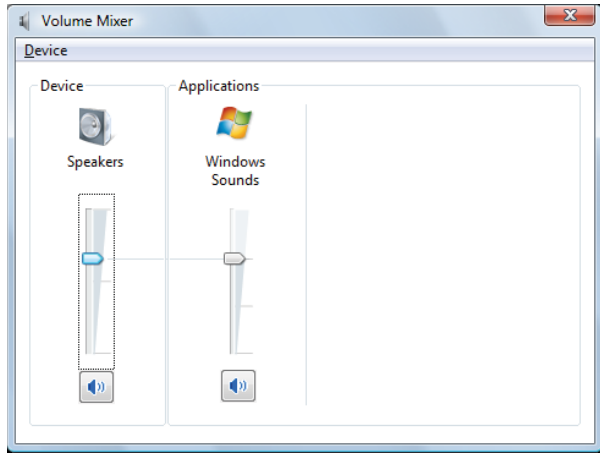

Tip

Adjust the Windows Sounds slider to change system sounds volume independently of general volume (such as the volume used for music and game sounds).

- 5 Click X in the top-right corner of the window to close it.

Turning your wireless radio on or off

Your Gateway notebook may have a factory-installed wireless radio.



Warning

Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11 and Bluetooth communication devices are examples of devices that provide wireless communication.



Warning

In environments where the risk of interference to other devices or services is harmful or perceived as harmful, the option to use a wireless device may be restricted or eliminated. Airports, hospitals, and oxygen or flammable gas laden atmospheres are limited examples where use of wireless devices may be restricted or eliminated. When in environments where you are uncertain of the sanction to use wireless devices, ask the applicable authority for authorization prior to using or turning on the wireless device.

IEEE 802.11 wireless network radio

Your notebook may have an IEEE 802.11 radio for accessing the Internet through a wireless access point or communicating with other computers on a wireless Ethernet network.

► To turn the wireless IEEE 802.11 radio on:

- 1 Click **® (Start), All Programs, Accessories**, then click **Windows Mobility Center**. When the *Windows Mobility Center* window opens, click **Turn wireless on**.

► To turn the wireless IEEE 802.11 radio off:

- Click **® (Start), All Programs, Accessories**, then click **Windows Mobility Center**. When the *Windows Mobility Center* window opens, click **Turn wireless off**.



Tip

For more information about using your notebook on a wireless network, see "Wireless Ethernet Networking" in your online *User Guide*

Disabling the wireless IEEE 802.11 radio

You should disable the wireless IEEE 802.11 radio while traveling by airplane to prevent it from being accidentally turned on while in flight.

Bluetooth radio

Your notebook may have a Bluetooth radio for communicating with another Bluetooth device, such as a printer, scanner, camera, MP3 player, headphone, keyboard, or mouse.

► To turn the Bluetooth radio on:

- Press **FN + F6**.

► To turn the Bluetooth radio off:

- Press **FN + F6**.



Tip

For more information about using your notebook on a Bluetooth Personal Area Network, see "Bluetooth Networking" in your online *User Guide*.



Help

For more information about Bluetooth, click **Start**, then click **Help and Support**. Type the keyword **Bluetooth** in the **Search Help** box, then press **ENTER**.

Disabling the Bluetooth radio

You should disable the Bluetooth radio while traveling by airplane to prevent it from being accidentally turned on while in flight.

CHAPTER 4

Using Drives and Accessories




- Using the DVD drive
- Using the memory card reader
- Installing a printer or other peripheral device
- Viewing the display on a projector, monitor, or television



Using the DVD drive

You can use your notebook to enjoy a wide variety of multimedia features.

Identifying drive types

Your Gateway notebook may contain one of the following drive types. Look on the front of the drive for one or more of the following logos:

If your drive has this logo...	This is your drive type...	Use your drive for...
	DVD drive	Installing programs, playing audio CDs, playing DVDs, and accessing data. You cannot use this drive to create CDs or DVDs.
 	Combination DVD/CD-RW drive	Installing programs, playing audio CDs, playing DVDs, accessing data, and recording music and data to recordable CDs. You cannot use this drive to create DVDs.

If your drive has this logo...	This is your drive type...	Use your drive for...
 	Multi-format double layer DVD±RW drive	<p>Installing programs, playing audio CDs, playing DVDs, accessing data, recording music and data to CD-R or CD-RW discs, and recording video and data to DVD-R, DVD+R, DVD-RW, DVD+RW, or double layer DVD+R or DVD-R discs.</p> <p>Note: To use the double layer capability of the double layer recordable DVD drive, the blank DVDs you purchase must state Double Layer, Dual Layer, or DL. Using other types of blank media will result in less capacity.</p>
	Blu-ray disc	<p>Installing programs, playing audio CDs, playing DVDs and Blu-ray Discs, accessing data, and recording video and data to CDs, DVD-RAM, DVD-R, DVD-RW, and Blu-ray discs.</p>

Using a DVD drive



Important

Prerecorded DVD discs and DVD drives contain regional codes that help control DVD title exports and help reduce illegal disc distribution. To be able to play a prerecorded DVD, the disc's regional code and your DVD drive's regional code must match.

The regional code on your DVD drive is determined by your notebook's delivery address. The regional code for the United States and Canada is 1. The regional code for Mexico is 4. Your DVD drive's regional code must match the regional code of the disc. The regional code for the disc is on the disc, disc documentation, or packaging.



Important


When you place a single-sided disc in the tray or slot, make sure that the label side is facing up. If the disc has two playable sides, place the disc so the name of the side you want to play is facing up.

Using a tray-load DVD drive



Tip

For information about cleaning a CD or DVD, see [“Cleaning CDs or DVDs” on page 77](#).

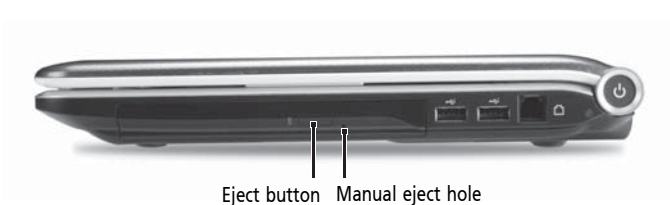

► To insert a CD or DVD:

- 1 Press the eject button on the DVD drive. After the tray opens slightly, pull the disc tray completely open.



- 2 Place the disc in the tray with the label facing up, then press down carefully on the disc until it snaps into place.
- 3 Push the tray in until it is closed.

► To remove a CD or DVD:

- 1 Press the eject button on the DVD drive. After the tray opens slightly, pull the disc tray completely open.
- 2 Carefully lift on the edges of the disc until it snaps off of the spindle.
- 3 Push the tray in until it is closed.



Tip

Your notebook must be turned on to remove CDs and DVDs using this method. If you do not want to turn on your notebook, manually eject the disc by inserting an opened paper clip into the manual eject hole.

Using the memory card reader

You can use memory cards to transfer pictures from a digital camera to your notebook. You can also use the memory card reader to transfer data between your notebook and a device that uses memory cards, such as a PDA, MP3 player, or cellular telephone.

Memory card types


The memory card reader supports Memory Stick®, Memory Stick Pro®, MultiMediaCard™, Secure Digital™, and xD-Picture Card™.

Inserting a memory card

- ▶ To insert a memory card:
 - Insert the memory card into the memory card slot with the label facing up and the arrow on the label pointing towards the notebook.




Using a memory card

- ▶ To access a file on a memory card:
 - 1 Click  (Start), then click Computer.
 - 2 Double-click the drive letter (for example, the E: drive), then double-click the file name.

Removing a memory card



Important

Do not use the remove hardware  icon in the taskbar to remove the memory card. If you use the remove hardware icon, your notebook may not recognize your memory card reader until you restart your notebook.

- ▶ To remove a memory card:
 - 1 Push the memory card into the notebook. The memory card pops out slightly.
 - 2 Pull the memory card out of the notebook.

Installing a printer or other peripheral device

Your notebook has one or more of the following ports: Universal Serial Bus (USB) and HDMI (digital audio/video). You use these ports to connect peripheral devices such as printers, scanners, and digital cameras to your notebook.



Important

Before you install a printer, scanner, or other peripheral device, see the device documentation and installation instructions.

USB ports support *plug-and-play* and *hot swapping*, which means that your notebook will usually recognize such a device whenever you plug it into the appropriate port. When you use a USB device for the first time, your notebook will prompt you to install any software the device needs. After doing this, you can disconnect and reconnect the device at any time.



Help

For more information about installing peripheral devices, click Start, then click Help and Support. Type the keyword **installing devices** in the Search Help box, then press ENTER.

Connecting a USB device

Your notebook has USB ports for connecting devices such as a diskette drive, flash drive, printer, scanner, camera, keyboard, or mouse.




Important


USB devices may have special installation instructions. See your USB device's installation guide.



Important

For more information about using the USB port on your device, see your device's documentation.

- To connect your USB device to your notebook:
- 1 Connect one end of the USB cable to your device.
 - 2 Connect the other end of the cable to a USB port  on your notebook.

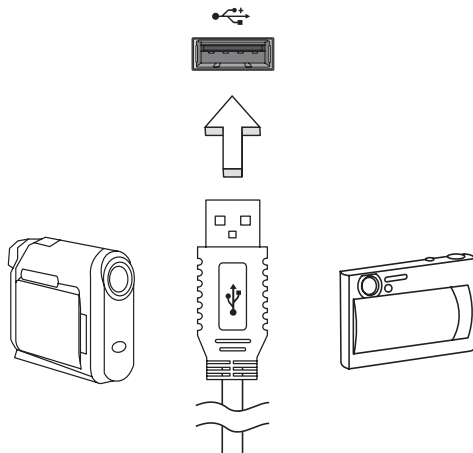

Viewing the display on a projector, monitor, or television


You can use your notebook for giving presentations by connecting an external monitor, projector, or television to your monitor (VGA) or optional HDMI port. Your notebook supports simultaneous LCD and external display. Simultaneous display lets you control a presentation from your notebook at the same time as you face your audience.


► To use a projector, monitor, or television:

- 1 Turn off your notebook.
- 2 If you are using the VGA port, connect one end of the VGA cable to the monitor, projector, or television.

-OR-

If you are using the HDMI port, connect one end of the HDMI cable to the monitor, projector, or television.

- 3 Plug the other end of the VGA cable into the monitor port  on your notebook.

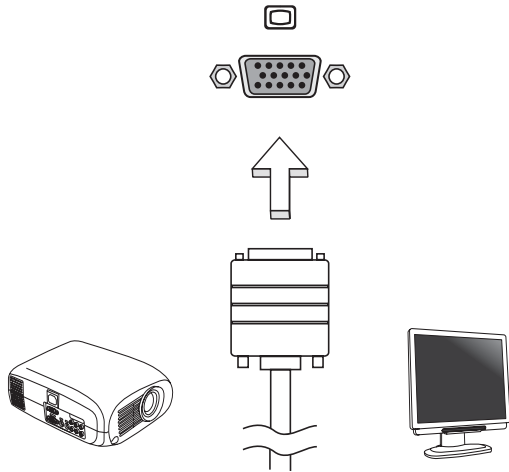

-OR-

- Plug the other end of the HDMI cable into the optional HDMI port on your notebook.



- 4 Turn on your notebook.
- 5 Plug the projector's, monitor's, or television's power cord into an AC power source and turn it on.

Windows recognizes the new hardware and the *New Display Detected* dialog box opens.

- 6 Select the options for the projector, monitor, or television, then click OK.


- 7 Press FN+F4 to switch between viewing the display on the LCD panel, viewing the display on the projector, monitor, or television, and viewing the display on both the LCD panel and the projector, monitor, or television.

**Important**

If a monitor, projector, or television is connected and you close the LCD panel, your notebook may turn off the LCD panel, but will not enter Sleep mode.

Adjusting the display properties


If the image on the projector, monitor, or television does not appear correctly, or if you want to use the display as an extension of your notebook desktop, you should adjust the display properties.

- To adjust the display properties on a projector, monitor, or television:
 - 1 Click  (Start), All Programs, Accessories, then click Windows Mobility Center. The *Windows Mobility Center* window opens.

**Tip**

For more information about the Windows Mobility Center, see "Using the Windows Mobility Center" in your online *User Guide*.


- 2 Click  (Change display settings). The *Display Settings* dialog box opens.

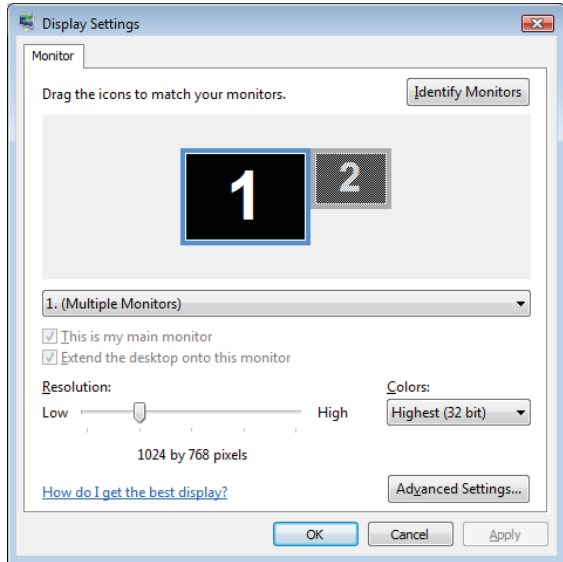

- 3 Click monitor 2.
- 4 Adjust properties such as Resolution or Colors if necessary.
- 5 To use the monitor, projector, or television as a "mirror" (duplicate) of the notebook display (both displays have the same content), click to deselect the check box for Extend my Windows desktop onto this monitor.
- 6 To use the monitor, projector, or television as an extension of your desktop (increasing the size of your Windows desktop), click to select the check box for Extend my Windows desktop onto this monitor. You can click and drag the "2" monitor icon to position it the same way the physical monitor is arranged on your desk.
- 7 Click OK.


Using the projector or monitor for a presentation


You can configure your notebook so the settings are correct each time you give a presentation.

- To use a projector, monitor, or television for a presentation:
 - 1 Click  (Start), All Programs, Accessories, then click Windows Mobility Center. The *Windows Mobility Center* window opens.

**Tip**

For more information about the Windows Mobility Center, see “Using the Windows Mobility Center” in your online *User Guide*.

- 2 Click  (Change presentation settings). The *Presentation Settings* dialog box opens.

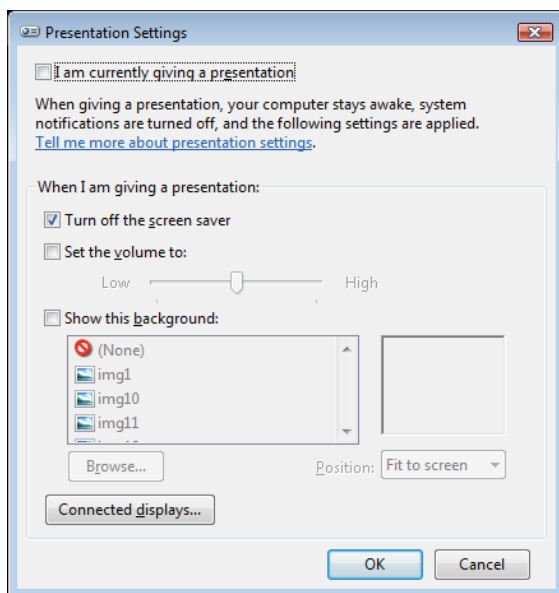

- 3 Adjust properties such as Turn off screen saver and Set the volume to if necessary.
- 4 Click OK.
- 5 Click Turn on to turn on the presentation settings. When you are finished giving the presentation, click Turn off to return to your standard notebook settings.

CHAPTER 5



Managing Power

- Monitoring the battery charge
- Recharging the battery
- Changing batteries
- Extending battery life
- Changing notebook power settings

Monitoring the battery charge

Your new Gateway notebook is designed to provide an exceptional balance of performance and portability. Your notebook uses the latest chipset and mobile processor technologies to manage the processor speed and power consumption for a greater battery life experience. This design provides you with maximum performance when plugged into AC power balanced with optimized battery life when on battery power.

Closely monitor the battery charge. When the battery charge gets low, change the battery or connect to AC power immediately to prevent losing any unsaved work. To monitor the battery charge:

- Move the mouse pointer over the power cord icon  or battery icon  in the taskbar. A message appears showing the remaining battery time and the current power plan.
- Wait for a Low Battery warning message to appear.
- Look at the battery charge status indicator.
If your battery charge indicator displays what looks like an inaccurate charge, you may need to recalibrate the battery.



Tip

For more information about the battery charge status indicator, see ["Front" on page 6](#).



Tip

For more information about recalibrating the battery, see ["Extending battery life" on page 58](#).

Recharging the battery

The battery recharges while it is installed and your notebook is connected to AC power. While the battery recharges, the battery charge indicator turns on.

Changing batteries



Warning

Danger of explosion if battery is incorrectly replaced.

Replace only with a battery specifically manufactured for your Gateway notebook. Discard used batteries according to local hazardous material regulations.

The batteries used in this device may present a fire or chemical burn hazard if mishandled. Do not disassemble, heat above 212°F (100°C), or incinerate. Dispose of used batteries promptly. Keep away from children.



Caution

If your notebook is connected to AC power you can change the battery while the notebook is turned on. If your notebook it is not plugged into an AC outlet, you must turn the notebook off while changing the battery.


► To replace the battery:

- 1 If your notebook is on and is connected to AC power, go to step 2.

-OR-

If your notebook is on and is not plugged into an AC outlet, save your work and turn off the notebook.

- 2 Turn your notebook over so the bottom is facing up.
- 3 Slide the battery lock to the unlocked position, then slide the battery release latch.

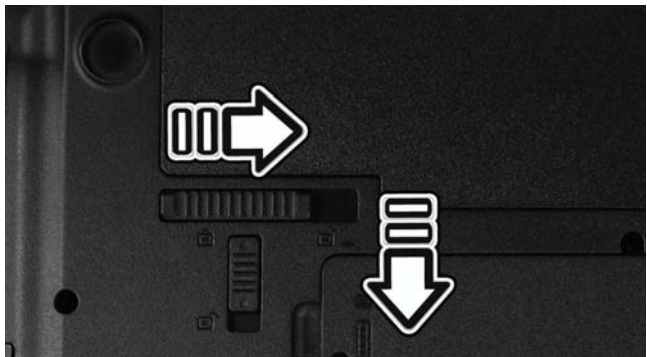

- 4 Slide the battery out of the notebook.



- 5 Slide a recharged battery into the notebook until it snaps into place.
- 6 Slide the battery lock to the locked position.
- 7 Turn your notebook over.
- 8 Open the LCD panel.

Extending battery life

Maximizing battery performance

To get maximum performance from your notebook battery, we recommend that you initially condition (fully charge and discharge) your new battery a few times during the first several weeks of use, to let it reach its maximum rated capacity.

Over the long term, use the battery at least once a month, even if it was kept in a cool, dry place for storage, but avoid frequent full discharges because this puts additional strain on the battery. Several partial discharges with frequent recharges are better for a lithium-ion battery than one complete discharge, and recharging a partially charged lithium-ion battery does not cause harm because there is no memory.

Conserving battery power

To conserve power while using the battery to power your notebook:

- Turn off wireless networking and Bluetooth.
- Dim the display as low as is comfortable.
- Disconnect all external devices, like USB devices.
- Select the *Power saver* power plan to get maximum power savings.



Tip

For more information about using power plans, see ["Changing notebook power settings" on page 62.](#)

- Close the LCD panel to turn off the display while you are not using your notebook. The display stays off until you open the panel again.
- Use Hibernate mode for maximum power savings while your notebook is not in use.
- Use the notebook touchpad instead of an external mouse.
- Decrease or mute speaker volume.
- Turn off all scheduled tasks.
- Turn off auto-save features in Microsoft Office and other applications.
- Copy programs from CDs or DVDs to the hard drive so you do not use battery power by running optical drives.
- Use the DVD drive only when necessary. This drive uses a large amount of power.
- Recharge the battery often, take an extra battery, and fully recharge the batteries before traveling. For more information, see ["Recharging the battery" on page 56.](#)



Tip

For more information about traveling with your notebook, see ["Traveling with Your Notebook" on page 67.](#)

Using alternate power sources

To extend battery life, use alternate power sources whenever possible.

- If traveling internationally, take electrical adapters. Save the battery for times when you cannot use a power adapter. If you plan on taking your AC power adapter, also take a single-plug surge protector.
- If you will have access to an EmPower™ in-flight power receptacle, an automobile power outlet, or an automobile cigarette lighter, use an airplane/ automobile power adapter or power inverter. Save the battery for times when you cannot use a power adapter.
- To find AC power outlets in airports, look for them next to support pillars, in large areas such as boarding gates, and under banks of telephones.

Changing power modes

You can use the following power modes to lengthen the life of your notebook's battery:

- *Sleep* - while your notebook is in Sleep mode, it switches to a low power state where devices, such as the display and drives, turn off.


- *Hibernate* - (also called *save to disk*) writes all current memory (RAM) information to the hard drive, then turns your notebook completely off. The next time you turn on your notebook, it reads the memory information from the hard drive and opens the programs and documents that were open when you activated Hibernate mode.
- *Hybrid Sleep* - while your notebook is in Hybrid Sleep mode, it switches to a low power state where devices, such as the display and drives, turn off similar to Sleep mode. The notebook also writes all current memory (RAM) information to the hard drive similar to Hibernate mode. If your notebook experiences a power outage while in Hybrid Sleep mode, the notebook reads the memory information from the hard drive and opens the programs and documents that were open when you activated Hybrid Sleep mode. If the notebook does not experience a power outage while in Hybrid Sleep mode, it restarts using the information in current memory, thus reducing startup time. You must turn on Hybrid Sleep mode to use it. For more information, see ["Changing advanced settings" on page 64](#).

Using power saving modes

Always save your work before using Sleep mode. In Sleep mode, your notebook reduces or turns off the power to most devices except memory. However, the information in memory is not saved to the hard drive. If power is interrupted, the information is lost.

When in Hibernate mode, your notebook saves all memory information to the hard drive, then turns the power completely off.

If your notebook is...	...and you want to...	...then
On	Enter Sleep or Hybrid Sleep mode	Press FN+F3.

If your notebook is...	...and you want to...	...then
On	Enter Hibernate mode	Click  (Start), click the arrow next to the lock icon, then click Hibernate.
In Sleep, Hybrid Sleep, or Hibernate mode	Exit Sleep, Hybrid Sleep, or Hibernate mode	Press the power button.

Changing notebook power settings



You can change the function of your notebook's power button, Sleep system key, and power-saving timers by changing power settings on your notebook. You can customize power settings from the Windows Mobility Center by selecting power plans and adjusting advanced power settings.


Changing the power plan

Power plans (groups of power settings) let you change power saving options such as when the display or hard drive is automatically turned off. You can select one of the defined power plans or create a custom power plan.

Three power plans are pre-defined for you:

- *Balanced* - This is the default power plan which balances performance and battery life.
- *Power saver* - This power plan sacrifices performance in order to extend battery life. Use this plan if you will be away from AC power outlets for an extended period of time. Your programs may run slower than you are accustomed to under the other two power plans.

- **High performance** - This power plan sacrifices battery life in order to gain performance. Use this plan if you need additional computing power for your program. Your battery may not last as long as you are accustomed to under the other two power plans.
- To change the power plan:
- 1 Click , All Programs, Accessories, then click Windows Mobility Center. The *Windows Mobility Center* window opens.
 - 2 Click  (Change power settings). The *Select a power plan* window opens.

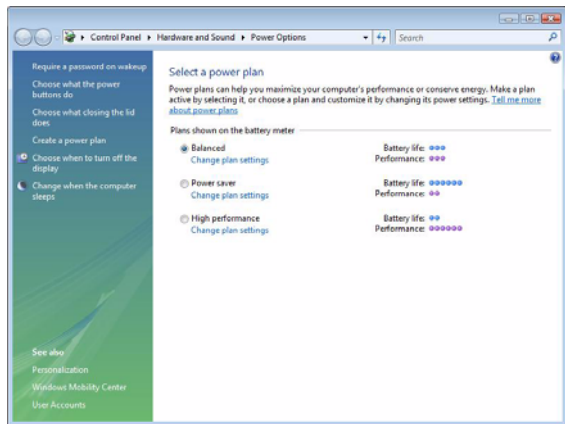

- 3 Select the power plan you want to use.
- OR -

Click Change plan settings, modify the power plan you selected, then click Save changes.






Help

For more information about changing the power plan, click Start, then click Help and Support. Type the keyword **power plan** in the Search Help box, then press ENTER.

Changing advanced settings

Advanced power settings let you assign different power saving modes to the power button and Sleep system key. You can also select which power saving mode is activated when you close the LCD panel.

- To change advanced power management settings:
 - 1 Click  (Start), All Programs, Accessories, then click Windows Mobility Center. The *Windows Mobility Center* window opens.
 - 2 Click  (Change power settings). The *Select a power plan* window opens.

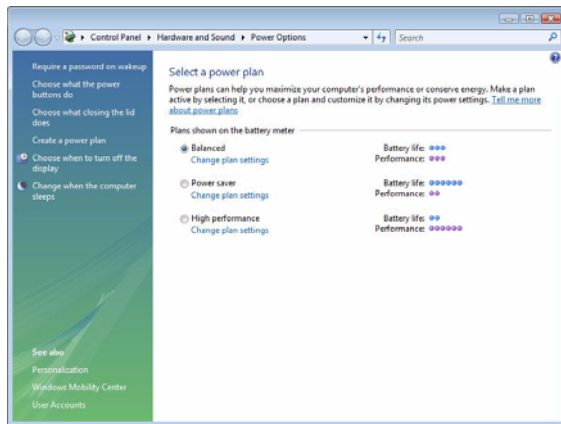

- 3 Click a setting on the left side of the screen that you want to change. The top three settings are not tied to a power plan. The bottom two settings modify the currently selected power plan.



Help

For more information about changing the power management settings, click Start, then click Help and Support. Type the keyword **power management** in the Search Help box, then press ENTER.

- To turn on Hybrid Sleep mode:
 - 1 On the *Select a power plan* window, click Change plan settings for the plan you are using. The *Change settings for the plan* window opens.
 - 2 Click Change advanced power settings. The *Power Options* dialog box opens.

- 3 Click the + in front of Sleep, then click the + in front of Allow hybrid sleep.
- 4 Change the values to On for On battery and Plugged in.



Help

For more information about hybrid sleep, click Start, then click Help and Support. Type the keyword **hybrid** in the Search Help box, then press ENTER.

CHAPTER 6

Traveling with Your Notebook

- Packing your notebook
- Traveling by air
- Dial-up modem
- Radio frequency wireless connections
- Security
- Power
- Additional tips

Packing your notebook

- Remove all discs, peripheral devices, and cables. Remember to pack those you will need while traveling.
- Pack your notebook securely into a briefcase or hand-carried luggage, and keep it separate from toiletries, liquids, and food. Do not pack it in checked luggage.
- Keep your notebook stable during travel. Secure it to prevent it from sliding around in overhead bins and car trunks.

Traveling by air

- Do not check your notebook as luggage.
- Charge the battery in case airport security asks you to start your notebook.
- Have your notebook hand-inspected or sent through the X-ray scanner, but never carry it through the metal detector.
- Turn off your notebook for takeoff and landing.
- Turn off all wireless devices while in the aircraft.

Dial-up modem

- Take a telephone cord to connect the modem to telephone jacks. If you are traveling internationally, take telephone jack adapters or an acoustic handset coupler.
- Take a telephone line protector.
- Take a telephone line tester to check for unsafe lines, especially if you are traveling internationally.
- Take remote access information with you so you can connect to your ISP while outside of your usual calling area. A list of country dialing codes may be especially useful if you are traveling internationally.

Radio frequency wireless connections



Important

If your notebook came equipped with an internal embedded wireless device, see [“Legal Information” on page 117](#) for general wireless regulatory guidelines.

- Every country has different restrictions on the use of wireless devices. If your notebook is equipped with a wireless device, check with the local radio approval authorities prior to your trip for any restrictions on the use of a wireless device in the destination country.
- Wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11 and Bluetooth communication devices are examples of devices which use wireless to communicate.



Tip

For more information about turning your wireless device on or off, see [“Turning your wireless radio on or off” on page 39](#).

Security

- Get a locking cable for your notebook so you can attach a cable lock and leave your notebook in your hotel room while you are away.
- Always keep your notebook with you while waiting in airports, train stations, or bus terminals. Be ready to claim your notebook as soon as it passes through the X-ray machine in security checkpoints.
- Write down your notebook model number and serial number (located on the bottom of your notebook) in case of theft or loss, and keep the information in a safe place. Also, tape your business card or an address label to your notebook and accessories.
- Whoever sits next to you or behind you can see your notebook display. Avoid working with confidential files until you can be sure of privacy.
- Use a startup password to restrict access to your notebook. The startup password is set using the BIOS utility.



Caution

Use a password that you can remember, but that is difficult for someone else to guess. The password feature is very secure, with no easy way to recover a forgotten password. If you forget your password, you must return your notebook to Gateway for service.

► To create a startup password:

- 1 Restart your notebook. As soon as you see a startup screen, press F2. The BIOS Setup utility opens.
- 2 Open the Security menu, highlight Set Supervisor Password, then press ENTER and follow the instructions. You must set the supervisor password in order to set the user (startup) password.



Important

You must enter the Supervisor Password each time you use the BIOS Setup utility.

- 3 Highlight Set User Password, then press ENTER and follow the instructions. This is the password you need to enter at startup.



Important

You must enter the User Password each time you turn on your notebook if it was turned off or put in hibernate mode. You do not need to enter the User Password if your notebook was put in Sleep mode.

- 4 Highlight Password on boot, then press ENTER.
 - 5 Highlight Enabled, then press ENTER.
 - 6 Open the Exit menu, highlight Exit Saving Changes, then press ENTER.
 - 7 When you start your computer, you are prompted to enter the user password you set in step 3.
- Review the information in “Protecting your notebook” in your online *User Guide*.

Power

- Take your AC power adapter to recharge the battery. If you are traveling internationally, take power plug adapters.
- Take a portable surge protector to protect your notebook from power surges.
- To get the best performance from your notebook, avoid using the battery whenever possible, monitor the battery charge, and use the most efficient power management settings. For information on conserving battery power, using alternate power sources, and monitoring the battery charge, see [“Managing Power” on page 55](#).

Additional tips

- If you plan to use several USB peripheral devices, take a portable USB hub to provide additional USB ports.
- Take a network cable if you need to connect to a network. Some hotels provide Internet connectivity only through their networks.
- If your notebook has been exposed to cold temperatures, let it warm to room temperature before turning it on.
- Carry proof of ownership or a merchandise passport when traveling internationally.
- Consult your insurance company and credit card company to learn about emergency travel assistance if your notebook is lost or damaged.
- Take your recovery discs in case you need to install an additional driver or software.



Tip

You can create a *Drivers and Applications Recovery* disc using the Gateway Recovery Management.

CHAPTER 7

Maintaining Your Notebook

- Caring for your notebook
- Cleaning your notebook
- Maintaining the battery
- Cleaning CDs or DVDs
- Recovering your system

Caring for your notebook

To extend the life of your notebook:

- Be careful not to bump or drop your notebook, and do not put any objects on top of it. The case, although strong, is not made to support extra weight.
- When transporting your notebook, we recommend that you put it in a carrying case.
- Keep your notebook away from magnetic fields. Magnetic fields can erase data on hard drives.
- Never turn off your notebook when the drive indicator is on because data on the hard drive could be lost or corrupted.
- Avoid subjecting your notebook to extreme temperature changes. The case (and LCD panel) can become brittle and easy to break in cold temperatures and can melt or warp in high temperatures. Damage due to either extreme is not covered by your warranty. As a general rule, your notebook is safest at temperatures that are comfortable for you.
- Keep all liquids away from your notebook. When spilled onto notebook components, almost any liquid can result in expensive repairs that are not covered under a standard warranty.
- Avoid dusty or dirty work environments. Dust and dirt can clog the internal mechanisms and can lead to permanent damage to the notebook.
- Do not block the ventilation fan slots. If these slots are blocked, your notebook may overheat resulting in unexpected shutdown or permanent damage to the notebook.
- When storing your notebook for an extended period of time, unplug AC power and remove the battery after discharging them partway.

Cleaning your notebook

Keeping your notebook clean and the vents free from dust helps keep your notebook performing at its best. You may want to gather these items and put together a notebook cleaning kit:

- A soft, lint-free cloth
- An aerosol can of air that has a narrow, straw-like extension
- Cotton swabs
- A DVD drive cleaning kit

Cleaning the exterior



Warning

When you shut down your notebook, the power turns off, but some electrical current still flows through your notebook. To avoid possible injury from electrical shock, unplug the power cord, modem cable, and network cable from the wall outlets and remove the battery.

Always turn off your notebook and other peripherals before cleaning any components. Also, remove the battery before cleaning any components.

Use a damp, lint-free cloth to clean your notebook and other parts of your system. Do not use household abrasive or solvent cleaners because they can damage the finish on components.

Your notebook is cooled by air circulated through the vents on the case, so keep the vents free of dust. With your notebook turned off and unplugged, brush the dust away from the vents with a damp cloth. Be careful not to drip any water into the vents. Do not attempt to clean dust from the inside of your notebook with the exception of the memory bay.



Tip

You may want to occasionally open the memory bay door and remove dust and lint using an aerosol can of air.

Cleaning the keyboard

You should clean the keyboard occasionally by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.

If you spill liquid on the keyboard, turn off your notebook and turn the notebook upside down. Let the liquid drain, then let the keyboard dry before trying to use it again. If the keyboard does not work after it dries, you may need to replace it. A replacement keyboard may not be covered by your warranty.

Cleaning the notebook screen



Caution

A notebook LCD screen is made of specially coated glass and can be scratched or damaged by abrasive or ammonia-based glass cleaners.

Use a soft cloth and water to clean the LCD screen. Squirt a little water on the cloth (never directly on the screen), and wipe the screen with the cloth.

Maintaining the battery

The life span of a notebook battery is about 1.5 to 3 years, under normal conditions. As the battery begins to die, you will have to recharge the battery more frequently because it cannot hold a full charge.

Do not expose the battery to high heat or freezing temperatures. Hot batteries discharge very quickly, and cold ones cannot create as much power. Short battery life is more likely to be caused by heat than by charge/discharge patterns. Keep your lithium-ion battery cool. Avoid a hot car, for example.

Charge often, but do not try to fully discharge the battery frequently. This only adds strain. Several partial discharges (regular use), with frequent recharges, are better for lithium-ion than one total discharge. Recharging a partially charged lithium-ion battery does not cause any harm because it has no "memory."

Batteries with fuel gauges (notebooks) should be calibrated by applying a deliberate full discharge once every 30 charges. Running the battery down in the equipment does this. If ignored, the fuel gauge becomes increasingly less accurate and in some cases will cut off the device prematurely.

Using the right charger is important. By now you probably know that each kind of battery has its own technology, its own rate of charge, and so on. Charging lithium batteries correctly is one way to extend their life and to avoid damage.

Storing batteries

Do not charge up the battery, then store it away. A stored battery should be used every three to four weeks. Let the battery fully discharge, then recharge to 40% if you plan to store it again. If you store a battery for longer than three to four weeks, the battery could fully discharge because the battery circuitry itself consumes power.

If you have a spare lithium-ion battery, use one exclusively and keep the other cool by placing it in the refrigerator. Make sure that it is wrapped protectively and that nothing will be dropped on it. Do not freeze the battery.

Do not use old batteries. Avoid purchasing spare lithium-ion batteries and storing them for later use. Do not buy old stock, even if it is sold at clearance prices. While it makes sense to have 2 or 3 extra batteries, so that you always have a fresh one charged up and ready to go, if you buy batteries and store them for years, they may not work when you decide to use them.

Consider removing the battery from your notebook when running on fixed power. However, remember that when you have removed the battery from your notebook while using it with an electrical outlet, the automatic battery charger no longer keeps the battery charged.



Caution

When the battery is in the notebook and the notebook is running on AC power, the battery constantly charges, even though it has a full charge. This reduces the life of the battery. If the battery is fully charged and you want to run on AC power, remove the battery.

Cleaning CDs or DVDs

Wipe from the center to the edge, not around in a circle, using a product made especially for the purpose.



Recovering your system

You can solve most computer problems by following the information in [“Troubleshooting” on page 87](#) or in the technical support pages at www.gateway.com. Problem solving may also involve reinstalling some or all of the computer’s software (also called *recovering* or *restoring* your system). Gateway provides everything you need to recover your system under most conditions.



Caution

To prepare your computer for additional system recovery options, you should create a set of recovery discs as soon as possible. Recovery discs take some time to create, but for long-term reliability, the effort is worth it. For instructions, see [“Creating recovery discs” on page 79](#).

► To recover your system:

- 1 Create recovery discs as soon as you can.

You can use these discs later for recovering your system from significant hardware and software problems. For instructions, see [“Creating recovery discs” on page 79](#).

- 2 Perform minor fixes.

If only one or two items of software or hardware have stopped working correctly, the problem may be solved by reinstalling the software or the device drivers. To recover software and drivers that were pre-installed at the factory, see [“Recovering pre-installed software and drivers” on page 81](#). For instructions on reinstalling software and drivers that were not pre-installed, see that product’s documentation or technical support Web site.

- 3 Revert to a previous system condition.

If reinstalling software or drivers does not help, then the problem may be solved by returning your system to a previous state when everything was working correctly. For instructions, see [“Returning to a previous system condition” on page 82](#).

- 4 Reset your system to its factory condition.


If nothing else has solved the problem and you want to reset your system to factory condition, see [“Returning your system to its factory condition” on page 84](#).

Creating recovery discs

If your computer experiences problems that are not recoverable by other methods, you may need to reinstall the Windows operating system and factory-loaded software and drivers. To reinstall using discs, you must create the set of recovery discs beforehand.

► To create recovery discs:

- 1 Click Ⓜ (Start), All Programs, Gateway, then click Gateway Recovery Management. *Gateway Recovery Management* opens.

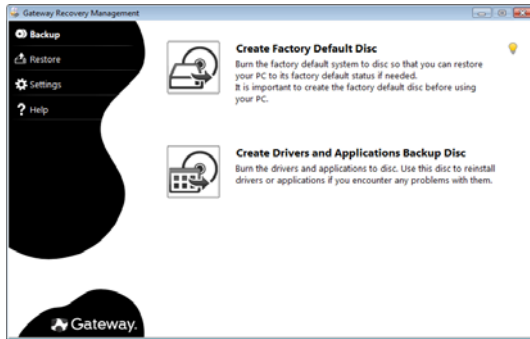

- 2 To create recovery discs for the hard drive's entire contents, including Windows Vista and all factory-loaded software and drivers, click Create factory default disc.

- OR -

To create recovery discs for only the factory-loaded software and drivers, click Create driver and application backup disc.



Important


We recommend that you create each type of recovery disc as soon as possible.

The *Create Backup Disc* dialog box opens.



This dialog box tells you the number of blank, recordable discs you will need to complete the recovery discs. Make sure that you have the required number of identical, blank discs ready before continuing.

- 3 Insert a blank disc into the drive indicated in the Burn to list, then click Next. The first disc begins recording, and you can watch its progress on the screen.

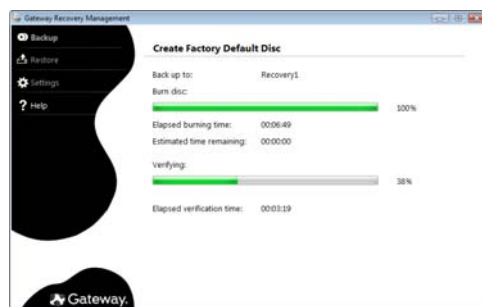

When the disc finishes recording, the drive ejects it.

- 4 Remove the disc from the drive and mark it with a permanent marker.



Important

Write a unique, descriptive label on each disc, such as "Windows Recovery Disc 1 of 2." or "Apps/Drivers Recovery disc."

- 5 If multiple discs are required, insert a new disc when prompted, then click OK. Continue recording discs until the process is complete.

Recovering pre-installed software and drivers

As a troubleshooting step, you may need to reinstall the software and device drivers that came pre-installed on your computer from the factory. You can recover using either your hard drive or the backup discs you have created.

- New software—If you need to recover software that did *not* come pre-installed on your computer, you need to follow that software's installation instructions.
- New device drivers—If you need to recover device drivers that did *not* come pre-installed on your computer, follow the instructions provided with the device.


► To recover your pre-installed software and drivers:

- 1 Click @ (Start), All Programs, Gateway, then click Gateway Recovery Management. *Gateway Recovery Management* opens.







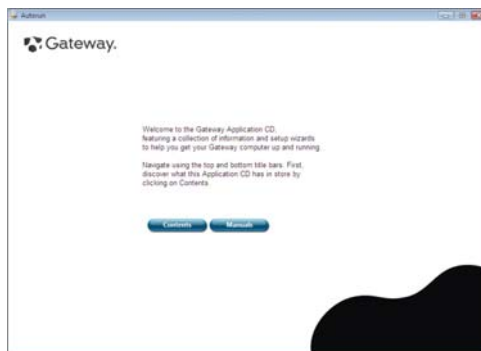



- OR -


If you are recovering from your driver and application recovery disc, insert it into the disc drive, then go to Step 3 after the *Gateway Application Recovery* main menu opens.

- 2 Click the Restore tab, then click Reinstall Drivers or Applications. The *Gateway Application Recovery* main menu opens.



- 3 Click **Contents**. A list of software and device drivers opens.

Class	Description	Version	Install
Windows Vista Software			
Driver	Intel SATA Driver for Avastion-SR	7.6.0.1011	
Driver	Intel Chipset Driver	8.2.0.1014	
Driver	Intel Video Driver for Avastion-SR	7.14.101.1409	
Driver	Agere Modem Driver for Avastion-SR 32-bit	2.1.75	
Driver	Synaptics Touchpad Driver	9.2.3.0	
Driver	Sigmatel Audio Driver for Avastion-SR	6.10.5000.0	
Driver	Chicony Webcam SW and Driver for Avastion-SR	1.7.030.1029	
Driver	Marvell E2A WLAN	1.0.2.0	
Driver	Realtek Card Reader Driver for Avastion-SR	6.0.6000.2001	
Driver	Realtek LAN Driver for Avastion-SR	6.190.1115.2007	

- 4 Click the install icon  for the item you want to install, then follow the on-screen prompts to complete the installation. Repeat this step for each item you want to reinstall.

Returning to a previous system condition

Microsoft System Restore periodically takes “snapshots” of your system settings and saves them as *restore points*. In most cases of hard-to-resolve software problems, you can return to one of these restore points to get your system running again.


Windows automatically creates an additional restore point each day, and also each time you install software or device drivers.

Help


For more information about using Microsoft System Restore, click Start, then click Help and Support. Type **windows system restore** in the Search Help box, then press ENTER.

► To return to a restore point:

- 1 Click **®** (Start), Control Panel, System and Maintenance, then click Backup and Restore Center. The *Backup and Restore Center* opens.

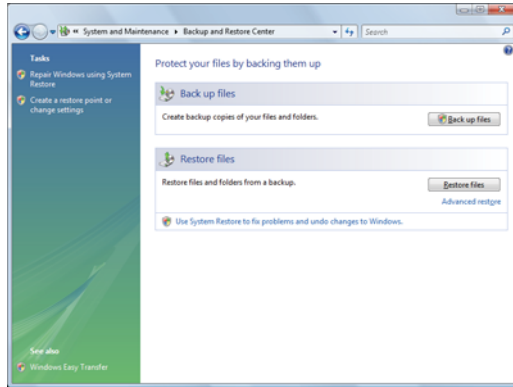

- 2 On the left side of the window, click Repair Windows using System Restore, then click Next. The *Choose a restore point* dialog box opens.

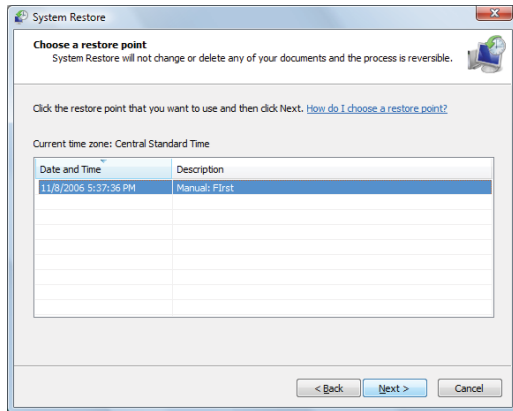

- 3 Click the restore point you want, click Next, then click Finish. A confirmation message box appears.
- 4 Click Yes. Your system is restored using the restore point you specified. This process may take several minutes, and may restart your computer.

Returning your system to its factory condition

In case your computer experiences problems that are not recoverable by other methods, you may need to reinstall everything to return your system to its factory condition. You can reinstall using either your hard drive or the recovery discs you have created.




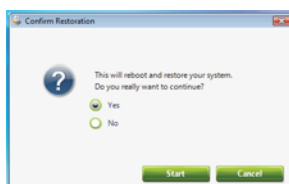
Caution

This complete recovery deletes everything on your hard drive, then reinstalls Windows and all software and drivers that were pre-installed on your system. If you can access important files on your hard drive, back them up now.


- If you can still run Windows Vista, see [“Recovering from within Windows Vista” on page 84](#).
- If you cannot run Windows Vista and your original hard drive is still working, see [“Recovering from the hard drive during startup” on page 85](#).
- If you cannot run Windows Vista and your original hard drive has been completely re-formatted or you have installed a replacement hard drive, see [“Recovering from your recovery discs” on page 86](#).

Recovering from within Windows Vista

- To reinstall Windows Vista and all pre-installed software and drivers:
- 1 Click  (Start), All Programs, Gateway, then click Gateway Recovery Management. *Gateway Recovery Management* opens.
 - 2 Click the Restore tab, then click Completely Restore System to Factory Defaults. The *Confirm Restoration* dialog box opens.



- 3 Click Yes, then click Start. A dialog box displays information about the hard drive that the operating system will be recovered to.

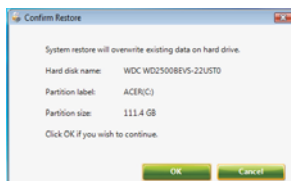

Caution

Continuing the process will erase all files on your hard drive.

- 4 Click OK. The recovery process begins by restarting your computer, then continues by copying files to your hard drive. This process may take a while, but a *Gateway Recovery Management* screen shows you its progress. When the recovery has finished, a dialog box prompts you to restart your computer.
- 5 Click OK. Your computer restarts.
- 6 Follow the on-screen prompts for first-time system setup.

Recovering from the hard drive during startup

- To reinstall Windows Vista and all pre-installed software and drivers:
 - 1 Turn on your computer, then press ALT+F10 during startup. *Gateway Recovery Management* opens.
 - 2 Click Completely Restore System to Factory Defaults.



Caution

Continuing the process will erase all files on your hard drive.

- 3 Click Next to continue. Your hard drive's original, factory-loaded contents are recovered. This process will take several minutes.

Recovering from your recovery discs

- To reinstall Windows Vista and all pre-installed software and drivers:

**Caution**

Before using your recovery discs, open the BIOS setup utility and enable the F12 boot menu.

- 1 Turn on your computer, insert the first system recovery disc into your optical disc drive, then restart your computer.

**Caution**

Continuing the process will erase all files on your hard drive.

- 2 During startup, press F12 to open the boot menu. The boot menu is where you can select which device to start from, such as the hard drive or an optical disc.
- 3 Use your arrow keys to select CDROM/DVD, then press ENTER. Windows installs from the recovery disc you inserted.
- 4 Insert the second recovery disc when prompted, then follow the on-screen prompts to complete the recovery.

CHAPTER 8

Troubleshooting

- [Safety guidelines](#)
- [First steps](#)
- [Troubleshooting](#)
- [Telephone support](#)

Safety guidelines



Warning

Do not try to troubleshoot your problem if power cords or plugs are damaged, if your notebook was dropped, or if the case was damaged. Instead, unplug your notebook and contact a qualified computer technician.

While troubleshooting your notebook, follow these safety guidelines:

- Never remove the memory bay cover or hard drive bay cover while your notebook is turned on, while the battery is installed, and while the modem cable, network cable, and AC power adapter are connected to your notebook.
- Make sure that you are correctly grounded before accessing internal components.
- After you complete any maintenance tasks where you remove the memory bay cover or hard drive bay cover, make sure that you replace the cover, reinstall any screws, then replace the battery before you start your notebook.



Help

For more information about troubleshooting, click Start, then click Help and Support. Type the keyword **troubleshooting** in the Search Help box, then press ENTER.

First steps

If you have problems with your notebook, try these things first:

- Make sure that the AC power adapter is connected to your notebook and an AC outlet and that the AC outlet is supplying power.
- Make sure that the power cord is firmly connected to the AC power adapter.
- If you use a power strip or surge protector, make sure that it is turned on.

- If the notebook will not turn on, try turning it on with the notebook plugged in and the battery removed, then try turning the notebook on with the notebook unplugged and the battery installed.
- If a peripheral device (such as a keyboard or mouse) does not work, make sure that all connections are secure.
- Make sure that your hard drive is not full.
- If an error message appears on the screen, write down the exact message. The message may help Gateway Customer Care in diagnosing and fixing the problem.
- If you added or removed peripheral devices, review the installation procedures you performed and make sure that you followed each instruction.
- If an error occurs in a program, see the program's printed documentation or the online help.

Troubleshooting

Troubleshooting topics are listed in alphabetical order.

Audio

Audio troubleshooting is covered under ["Sound" on page 113](#).

Battery

Battery troubleshooting is covered under ["Power" on page 111](#).

CD drives

CD drive troubleshooting is covered under ["DVD drives" on page 92](#).

Diskette drive (external)

The diskette drive is not recognized

- Shut down and restart your notebook.
- Disconnect the USB cable, then reconnect it.

You see an “Access Denied” or “Write protect” error message

- Move the write-protection tab in the upper-right corner of the diskette down (unprotected).
- The diskette may be full. Delete unnecessary files on the diskette and try again.
- Not all diskettes are IBM-compatible. Make sure that the diskette you are using is IBM-compatible.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.

You see a “Disk is full” error message

- Delete unnecessary files on the diskette.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.
- Run Error checking on the diskette. If errors are detected and corrected, try using the diskette again. For instructions on running Error checking, see “Checking the hard drive for errors” in your online *User Guide*.

You see a “Non-system disk,” “NTLDR is missing,” or “Disk error” error message

- Eject the diskette from the diskette drive, then press ENTER.
- Make sure that the diskette you are using is IBM-compatible.

The diskette drive status indicator is lit continuously

- Remove the diskette from the drive. If the indicator stays on, try restarting your notebook.

Display

The screen is too dark

- Adjust the brightness using the system keys or Windows Mobility Center. For more information about adjusting the brightness, see ["Adjusting the brightness" on page 36](#).

The screen resolution is not correct

- Change the screen resolution from the *Display Settings* dialog box. For instructions on changing the screen resolution, see "Changing the color depth and screen resolution" in your online *User Guide*.

The text on the display is dim or difficult to read

- Adjust the brightness using the system keys or Windows Mobility Center. For more information about adjusting the brightness, see ["Adjusting the brightness" on page 36](#).
- Change the display settings. For instructions on changing the display settings, see "Changing screen settings" in your online *User Guide*.
- Move your notebook away from sources of electrical interference, such as televisions, unshielded speakers, microwaves, fluorescent lights, and metal beams or shelves.

The display has pixels that are always dark or too bright

- This condition is normal and inherent in the TFT technology used in active-matrix LCD screens. Gateway's inspection standards keep these to a minimum. If you feel these pixels are unacceptably numerous or dense on your display, contact Gateway Customer Care to identify whether a repair or replacement is justified based on the number of pixels affected.

The display is blank

- Adjust the brightness using the system keys or Windows Mobility Center. For more information about adjusting the brightness, see ["Adjusting the brightness" on page 36](#).

- Make sure the notebook is not in Sleep or Hibernate mode. Press the power button.
- The notebook may be sending its display to an external monitor or projector. Press FN + F4 several times to toggle through the LCD panel, an external monitor or projector, or both.



Warning

In compliance with FCC regulations, use shielded cables to connect to other computing devices. A dual-link cable is recommended for DVI output.

DVD drives

Your notebook does not recognize a disc

- The disc may not be seated correctly in the tray. When you place a disc on the tray, make sure that you press the disc firmly onto the spindle so the retainers hold the disc in place.
- Make sure that the disc label is facing up, then try again.
- Try a different disc. Occasionally discs are flawed and cannot be read by the drive.
- Some music CDs have copy protection software. You may not be able to play these CDs on your notebook.
- Your notebook may be experiencing some temporary memory problems. Shut down and restart your notebook.
- Clean the disc. For more information, see [“Cleaning CDs or DVDs” on page 77](#).

An audio CD does not produce sound

- Make sure that the CD label is facing up, then try again.
- Some music CDs have copy protection software. You may not be able to play these CDs on your notebook.
- Make sure that the volume control on your notebook is turned up. For more information about using your volume control, see [“Adjusting the volume” on page 37](#).
- Make sure that the Windows volume control is turned up. For instructions on how to adjust the volume control in Windows, see [“Adjusting the volume” on page 37](#).
- Make sure that Mute controls are turned off.

- If you are using the built-in speakers, make sure that nothing is plugged into the headphone jack on the notebook. For the location of the headphone jack, see [“Front” on page 6](#).
- If you are using powered speakers, make sure that they are plugged in and turned on.
- Clean the disc. For more information, see [“Cleaning CDs or DVDs” on page 77](#).
- Your notebook may be experiencing some temporary memory problems. Shut down and restart your notebook.
- Reinstall the audio device drivers.

A DVD movie will not play

- Make sure that the label or side you want to play is facing up, then try again.
- Shut down and restart your notebook.
- Clean the DVD. For more information, see [“Cleaning CDs or DVDs” on page 77](#).
- Make sure that the disc’s regional code and your DVD drive’s regional code match.
- Make sure that a DVD player program has been installed on your notebook. For instructions on playing a DVD, see [“Playing music and movies”](#) in your online *User Guide*.

A DVD does not produce sound on a television

- Audio is transmitted through an HDMI connection, however, audio is not transmitted through a monitor jack. If you are connecting your notebook to a television using the monitor jack, use the built-in speakers, a set of headphones or external powered speakers, or connect your notebook to a stereo system to hear sound while playing a DVD.

Ethernet

Ethernet troubleshooting is covered under [“Networks \(wired\)” on page 106](#).

File management

A file was accidentally deleted

- Recover the file from the Recycle Bin by following the instructions in “Deleting files and folders” in your online *User Guide*.



Caution

If a file was deleted while holding down the SHIFT key or if the Recycle Bin has been emptied, the file cannot be restored.



Help

For more information about restoring deleted files, click Start, then click Help and Support. Type the keyword **System Restore** in the Search Help box, then press ENTER.

Hard drive

You see an “Insufficient disk space” error message

- Delete unnecessary files from the hard drive using Disk Cleanup. For instructions on deleting unnecessary files, see “Deleting unnecessary files” in your online *User Guide*.
- Empty the Recycle Bin by right-clicking the Recycle Bin icon, then clicking Empty Recycle Bin.



Caution

All deleted files will be lost when you empty the Recycle Bin.

- Save your files to another drive. If the hard drive is full, copy any files not regularly used to backup media, then delete them from the hard drive.



Help

For more information about file management, click Start, then click Help and Support. Type the keyword **file management** in the Search Help box, then press ENTER.

You see a “Data error” message

- This may be the result of a defective area on the hard drive. To fix hard drive problems, run the Error checking program. For instructions on fixing hard drive problems, see “Checking the hard drive for errors” in your online *User Guide*.

The hard drive cannot be accessed, or you see a "General failure reading drive C" error message

- If a diskette is in the diskette drive, eject it and restart your notebook.
- Make sure that the hard drive is installed correctly. Remove it, firmly reinsert it, then restart your notebook.
- If your notebook has been subjected to static electricity or physical shock, you may need to reinstall the operating system.

Internet

You cannot connect to the Internet

- If you are using a dial-up modem, make sure that the modem cable is plugged into the optional modem jack and not the Ethernet network jack. For the location of your modem jack, see ["Back" on page 9](#).

-OR-

If you are using a cable or DSL modem, make sure that the modem cable is plugged into the Ethernet network jack and not the optional modem jack. For the location of your network jack, see ["Left" on page 6](#).

- Make sure that you do not have a problem with your modem. For more information, see ["Modem \(dial-up\)" on page 101](#).
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP technical support for help.



Help

For more information about troubleshooting Internet connections, click Start, then click Help and Support. Type the keyword **troubleshooting connections** in the Search Help box, then press ENTER.

You see an “Unable to locate host” message and are unable to browse the Internet

- This problem can occur when you have typed a URL (Web address) incorrectly, you have lost your Internet connection, or your ISP is having technical difficulties.

Double-check the URL or try a different URL. If the error message still appears, disconnect from the ISP connection and close your browser, then reconnect and open the browser. If you still get the error, your ISP may be having technical difficulties.

Connecting to a Web site takes too long

Many factors can affect Internet performance:

- The condition of the telephone lines in your residence or at your local telephone service
- The condition of the Internet computers to which you connect and the number of users accessing those computers
- The complexity of graphics and multimedia on Web pages
- Having multiple Web browsers open, performing multiple downloads, and having multiple programs open on your notebook

People are sending you e-mail messages, but you have not received any mail

- Click the receive button in your e-mail program.
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP for technical support.

Keyboard

A keyboard character keeps repeating or you see a “Keyboard stuck” or “Key failure” error message

- Make sure that nothing is resting on the keyboard.
- Make sure that a key is not stuck. Press each key to loosen a key that might be stuck, then restart your notebook.

You are pressing a letter key and a number appears on the screen

- The numeric keypad is turned on. For more information about using your keyboard, see [“Using the keyboard” on page 27](#).

An external keyboard does not work

- Make sure that the keyboard cable is plugged in correctly.
- Remove all extension cables and switchboxes.
- Clean the keyboard by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.
- Try a keyboard that you know works to make sure that the keyboard port works.
- If you spilled liquid in the keyboard, turn off your notebook and unplug the keyboard. Clean the keyboard and turn it upside down to drain it. Let the keyboard dry before using it again. If the keyboard does not work after it dries, you may need to replace it.

Media Center

This section only covers problems relating to Media Center mode. Media Center mode is available only on Windows Vista Home Premium and Windows Vista Ultimate versions. To view Media Center troubleshooting information that is not covered in this section, go to the Gateway support Web Site at www.gateway.com.



Help

For more information about Windows Media Center, click Start, then click Help and Support. Type the phrase **Media Center** in the Search Help box, then press ENTER.

The Media Center video display looks bad on your TV
Many factors, such as the display type, quality of the video source, type of connection used, quality of video cables, display device screen resolution, size of TV, age of the TV, or the type of TV (interlaced or progressive scan), can affect the video quality significantly:

- Display type—Some retail TVs may provide lower quality video. A progressive scan display device with an HDMI or VGA input is the best choice.

- **Type of connection used**—You can connect the notebook video output to a TV. However, the connection type has an effect on the video quality. The notebook has two video outputs:
 - **HDMI**—If your TV includes an HDMI port, connect the HDMI cable from the notebook's HDMI Out port to the TV's HDMI In port. HDMI display quality is usually superior for TV images. HDMI also transmits audio to your television. Many older TVs do not have an HDMI port.
 - **VGA**—If your TV does not include an HDMI port, but does include a VGA port, connect the VGA cable from the notebook's VGA (monitor) port to the TV's VGA In port. Many older TVs do not have a VGA port. VGA only transmits video. You should use the built-in speakers, a set of headphones or external powered speakers, or connect your notebook to a stereo system to hear sound.
- **Quality of video cables**—Poor quality or the incorrect type of video cables can cause problems and affect the video quality. Gateway recommends using high-quality video cables that can be purchased from Gateway.

**Important**

Cable connections must be made correctly for optimal video quality. A poor cable connection can lower video quality.

- **Screen resolution**—By default, the notebook uses a screen resolution optimized for the LCD screen. Many older TVs cannot display this high of a resolution and may shift, scramble, or scroll the picture. For a better picture on a TV display, you may need to lower the screen resolution to 800 × 600 or 640 × 480. For more information about changing the screen resolution, see “Changing color depth and screen resolution” in your online *User Guide*.

**Help**

For more information about adjusting display settings, click Start, then click Help and Support. Type the keyword **changing display settings** in the Search Help box, then press ENTER.

- **Size of display device**—Small computer monitors for standard computer applications are generally not optimized for motion video playback. Although they offer excellent resolutions and

refresh rates, they are designed to make static white backgrounds with black text look readable. Some small display devices do not make colorful motion video look its best. Generally, video will look better on a larger display device.

- Age of the TV—Newer TVs usually have more advanced features, produce a better quality picture, and support higher screen resolutions. The video display will likely be better on a newer model TV.
- Type of TV (interlaced or progressive scan)
Many CRT (tube) TVs use interlaced video. Interlaced video displays a video frame with two passes of alternating scan lines. The TV screen first displays the video image odd lines one at a time, sequentially from top to bottom, then it fills in the other half of the video image with the even lines. Because most TVs use this interlaced method to display the picture on the screen, a standard interlaced analog TV will most likely flicker when displaying thin lines and small text. An interlaced video display device will produce a lower quality display, especially when viewing and using the notebook functions.

Progressive scan video displays a video frame with one pass of sequential scan lines. A progressive scan TV displays the entire picture, drawn sequentially from top to bottom, without the odd/even interlacing. This results in a fuller, sharper picture and better display quality for viewing and using the Media Center functions. The progressive scan picture is also brighter and easier on your eyes.

You need to configure your notebook to output to a TV

- In Media Center mode, your notebook detects whether you are using a VGA or an HDMI display device and automatically changes the display settings for the type of display device you are using. For more information, review the FAQ topic at www.gateway.com.

You want to change display settings to get better TV or DVD image quality

- Adjust the display device brightness, contrast, hue, and saturation. For more information review the FAQ topic at www.gateway.com.

You want to know whether you can burn videos that were recorded in Media Center mode to a DVD

- Yes, you can. The Media Center saves recorded videos in the DVR-MS format. You can burn a DVR-MS file to a DVD with DVD recording (burning) software, such as Power2Go, and with the Media Center itself.

You want to know whether you can play recorded videos on other computers

- Yes, you can. A DVR-MS file recorded to DVD can be replayed on another computer with Media Center or on a computer without Media Center provided that it has a DVD player and DVD decoder software (such as PowerDVD). The computer without Media Center must also have Windows Vista or Windows XP with Service Pack (SP) 1 or 2, Windows Media Player 9 or later, and the Windows patch Q810243 Update.

You want to know whether you can play recorded videos on your home DVD player


- Yes, you can. DVDs recorded with the Media Center can be played on a home DVD player.

Memory

You see a “Memory error” message

- Make sure that the memory module is inserted correctly in the memory bay slot.
- Use the Memory Diagnostics Tool to help determine if a memory module is failing.

► To check the memory:

- 1 Click  (Start), then click Control Panel. The *Control Panel* window opens.
- 2 Click System and Maintenance.
- 3 Click Administrative Tools.
- 4 Double-click Memory Diagnostics Tool, then follow the on-screen instructions.



Help

For more information about troubleshooting memory errors, click Start, then click Help and Support. Type the keyword **memory error** in the Search Help box, then press ENTER.

You see a "Not enough memory" error message

- Close all programs, then restart your notebook.

Memory card reader

Drive letter for the memory card slot does not appear in the My Computer window

- Reboot your notebook.

Modem (cable or DSL)

The modem does not connect

- Make sure that the modem cable is plugged into the Ethernet network jack and not the optional modem jack. For the location of your network jack, see ["Left" on page 6](#).
- See the documentation that came with your modem for additional troubleshooting information.

Modem (dial-up)

Your modem does not dial or does not connect

- Make sure that the modem cable is plugged into the optional modem jack and not the Ethernet network jack. For the location of your modem jack, see ["Back" on page 9](#).
- Make sure that your notebook is connected to the telephone line and the telephone line has a dial tone.

- Make sure that the modem cable is less than 6 feet (1.8 meters) long.
- Remove any line splitters or surge protectors from your telephone line, then check for a dial tone by plugging a working telephone into the telephone wall jack.
- If you have additional telephone services such as call waiting, call messaging, or voice mail, make sure that all messages are cleared and call waiting is disabled before using the modem. Contact your telephone service to get the correct code to temporarily disable the service. Also make sure that the modem dialing properties are set appropriately.



Help

For more information about dialing properties, click **Start**, then click **Help and Support**. Type the keyword **dialing** in the Search Help box, then press **ENTER**.

- To check the dialing properties:
- 1 Click **®** (Start), then click **Control Panel**. The *Control Panel* window opens.
 - 2 Click **Hardware and Sound**.
 - 3 Click the **Phone and Modem Options**. The *Phone and Modem Options* dialog box opens.
 - 4 Click the **Dialing Rules** tab.
 - 5 Click the location from which you are dialing, then click **Edit**. The *Edit Location* dialog box opens.
 - 6 Make sure that all settings are correct.

- Disconnect any answering machine, fax machine, or printer that is on the same line as the modem. Do not connect these devices to the same telephone line as the modem.
- Make sure that you are not using a digital, rollover, or PBX line. These lines do not work with your modem.
- Check for line noise (scratchy, crackling, or popping sounds). Line noise is a common problem that can cause the modem to connect at a slower rate, abort downloads, or even disconnect. The faster the modem, the less line noise it can tolerate and still work correctly.

Listen to the line using your telephone. Dial a single number (such as 1). When the dial tone stops, listen for line noise. Wiggle the modem cable to see if that makes a difference. Make sure that the connectors are free from corrosion and all screws in the wall or telephone wall jack are secure.

You can also call your telephone service and have the telephone line checked for noise or low line levels.

- Try another telephone line (either a different telephone number in your house or a telephone line at a different location). If you can connect on this line, call your telephone service to fix the original line.
- Try connecting with the modem at a lower connection speed. If reducing the connect speed lets you connect, call your telephone service. The telephone line may be too noisy.

You cannot connect to the Internet

- The ISP may be having technical difficulties. Contact your ISP for technical support.
- See if the modem works with a different communications program. The problem may be with just one program.
- Review the troubleshooting information under [“Internet” on page 95.](#)

Your 56K modem does not connect at 56K

- Current FCC regulations restrict actual data transfer rates over public telephone lines to 53K. Other factors, such as line noise, telephone service provider equipment, or ISP limitations, may lower the speed even further.

If your notebook has a v.90 modem, the speed at which you can upload (send) data is limited to 33.6K. If your notebook has a v.92 modem, the speed at which you can upload data is limited to 48K. Your ISP may not support 48K uploads.


Your fax communications program only sends and receives faxes at 14,400 bps when you have a 56K modem

- Current fax technology only supports a maximum send and receive rate of 14,400 bps.

The modem is not recognized by your notebook

- Make sure that the line connected to the modem is working and plugged into the appropriate port on your notebook. For the location of your optional modem jack, see [“Back” on page 9](#).
- If the modem shares the telephone line with another device, make sure that the telephone line is not in use (for example, someone is on the telephone, or another modem is in use).
- Use a different modem cable. Some telephone cables do not meet required cable standards and may cause problems with the modem connection.
- Shut down and restart your notebook.
- Run Windows modem diagnostics.

► To run modem diagnostics:

- 1 Close all open programs.
- 2 Click  (Start), then click Control Panel. The *Control Panel* window opens.
- 3 Click Hardware and Sound.
- 4 Click Phone and Modem Options. The *Phone and Modem Options* dialog box opens.
- 5 Click the Modems tab.
- 6 Click your modem, then click Properties. The *Modem Properties* dialog box opens.


- 7 Click the Diagnostic tab, then click Query Modem. If information about the modem appears, the modem passed diagnostics. If no modem information is available, a white screen appears with no data, or if you get an error such as *port already open or the modem has failed to respond*, the modem did not pass diagnostics.



Help

For more information about modem troubleshooting, click Start, then click Help and Support. Type the keyword **modem troubleshooting** in the Search Help box, then press ENTER.

The modem is noisy when it dials and connects

- When your modem tries to connect to another modem, it begins *handshaking*. Handshaking is a digital “getting acquainted” conversation between the two modems that establishes connection speeds and communication protocols. You may hear unusual handshaking sounds when the modems first connect. If the handshaking sounds are too loud, you can turn down the modem volume.
- To turn down the modem volume:
- 1 Click  (Start), then click Control Panel. The *Control Panel* window opens.
 - 2 Click Hardware and Sound.
 - 3 Click Phone and Modem Options. The *Phone and Modem Options* dialog box opens.
 - 4 Click the Modems tab.
 - 5 Click the modem you want to adjust, then click Properties. The *Modem Properties* dialog box opens.
 - 6 Click the Modem tab, then adjust the Speaker volume control.
 - 7 Click OK twice to close the *Phone and Modem Options* dialog box.

Mouse

See also [“Touchpad” on page 114](#).

The external mouse does not work

- Make sure that the mouse cable is plugged in correctly.
- Shut down and restart your notebook.
- Remove all extension cables and switch boxes.
- Try a mouse you know is working to make sure that the mouse port works.

The external mouse works erratically

- Clean the mouse.
- Some mouse pad patterns “confuse” optical mice. Try the mouse on a different surface.

Networks (wired)

**Help**

For more information about network troubleshooting, click Start, then click Help and Support. Type the keyword **network troubleshooting** in the Search Help box, then press ENTER.

You cannot see the other computers on your wired Ethernet network

- Make sure that your Ethernet cable is plugged into the Ethernet jack on your notebook. Make sure that the other end is plugged into a router. For the location of your network jack, see [“Left” on page 6](#).
- Make sure that all computers are plugged into a powered electrical outlet and turned on.
- Make sure that the router is plugged into a powered electrical outlet and turned on. Most routers have lights that indicate they are working. For more information, see the documentation that came with your router.
- Make sure that all computers on your network have the same workgroup name.
- Make sure that all computers are using the same Subnet Mask.
- If you assigned IP addresses to the computers, make sure that all computers have different IP addresses. For home networks, IP addresses should be 192.168.N.N where N is a number you assign between 0 and 254. The first N should be the same for all computers on your network and the second N should be different for all computers on your network.

Your wired Ethernet network is running slower than you expect

- If your Ethernet network is running slower than you expect, check the speed of each Ethernet component. For best results, all Ethernet components should be standard Ethernet (10 Mbps), Fast Ethernet (100 Mbps or 10/100 Mbps), or Gigabit Ethernet (1000 Mbps or 10/100/1000 Mbps). A mixture of Ethernet, Fast Ethernet, and Gigabit Ethernet components will result in your network running at the slowest component speed.

You cannot connect to your company network

- Every network is unique. Contact your company computer department or network administrator for help.

Internet Explorer is unable to access the Internet

- Reset the power on your cable or DSL modem and your access point. This reestablishes communication between your Internet Service Provider and your modem and between your modem and your access point.
- If you previously accessed the Internet through a dial-up modem, Internet Explorer may not be set up to access the Internet through a network. Remove the dial-up connection in the Internet Options in Internet Explorer.

You cannot connect to your home network

- If your notebook is a member of a domain at your workplace, you may not be able to connect your notebook to your home network workgroup to access shared files or printers on your home network. You may, however, be able to access the Internet through your home network.



Caution

If your notebook was a member of a domain before you join a workgroup, it is disjoined from the domain and your computer account disabled. Contact your company computer department or network administrator for more information.

- Every home network is unique. See the documentation that came with your network equipment for troubleshooting information.

Networks (wireless)

You turned wireless networking on, but it takes a while to connect

- When wireless networking is turned on, it automatically scans for available connections. The scan can take approximately 30 seconds to complete.

Your connection on the network seems intermittent or your wireless network is running slower than you expect

- The speed of a wireless network is related to signal strength. Signal strength is affected by the distance between your wireless network devices, by radio interference, and by interference from natural obstructions such as walls, ceilings, floors, and doors.


If your wireless network is running slower than you expect, you should check your network signal strength. If you find the signal strength is low, try moving to a new location to increase the signal strength.



Important

Note any antenna placement constraints in the access point user guide because the speed of a wireless network is related to signal strength. Signal strength is affected by the distance between your wireless network devices, by radio interference, and by interference from natural obstructions such as walls, floors, and doors.

► To check the signal strength:

- 1 Click  (Start), right-click Network, then click Properties. The *Network and Sharing Center* window opens.
- 2 Click View status for the network connection. The *Wireless Network Connection Status* dialog box opens. The meter shows the signal strength for wireless networking on your computer if other computers with the same network name are within range of your computer.

You are in a wireless network, you can see the network, but cannot communicate, send files, print, or get to the Web

- If your access point uses WEP, go to the *Wireless Networking Properties* window and make sure that both the WAP and the WLAN in the computer have matching WEP keys.

You are in a wireless network, but no available networks are listed in the Connect to a network dialog box

- If the network you are attempting to access does not broadcast its SSID, you need to request the SSID from the administrator and add that network's information into the wireless utility.
- You may want to try entering **ANY** as the SSID, which will make the computer try to auto-detect the network.

Your wireless network is listed as a preferred network, but it has an "x" on it

- An x means your preferred network is not currently available or you are not currently in range to connect.

Internet Explorer is unable to access the Internet

- Reset the power on your cable or DSL modem and your access point. This reestablishes communication between your Internet Service Provider and your modem and between your modem and your access point.
- If you previously accessed the Internet through a dial-up modem, Internet Explorer may not be set up to access the Internet through a network. Remove the dial-up connection in the Internet Options in Internet Explorer.

You cannot see other computers on your network

- Your notebook may not have the same workgroup name as the other computers on your network. For more information, see “Naming the computers and workgroup” in your online *User Guide*.
- If your notebook was previously connected directly to your cable or DSL modem, and your ISP requires you to use a static IP address, your notebook is not set up to use a DHCP server. Modify the network properties so your notebook is set up for using a DHCP server.

You cannot connect to your network

- If your notebook is a member of a domain at your workplace, you may not be able to connect your notebook to your home network workgroup to access shared files or printers on your home network. You may, however, be able to access the Internet through your home network.



Caution

If your notebook was a member of a domain before you join a workgroup, it is disjoined from the domain and your computer account disabled. Contact your company computer department or network administrator for more information.

Passwords

Your notebook does not accept your password

Make sure that CAPS LOCK and NUM LOCK are turned off, then retype the password.

You forgot your startup password

The password feature (which is set in the BIOS Setup utility) is very secure, with no easy way to recover a forgotten password. You must return your notebook for repair. Call Gateway Customer Care for instructions.

Power

Your notebook is not working on AC power

- Make sure that your AC power adapter is connected correctly to your notebook. For instructions on connecting the AC power adapter, see ["Connecting the AC adapter" on page 18](#).
- If your notebook is plugged into a surge protector, make sure that the surge protector is connected securely to an electrical outlet, turned on, and working correctly. To test the outlet, plug a working device, such as a lamp, into the outlet and turn it on.
- Make sure that the AC power adapter cables are free from cuts or damage. Replace any damaged cables.

Your notebook is not working on battery power

- Check the power management settings. For more information about using power management settings, see ["Changing notebook power settings" on page 62](#).
- Make sure that the battery is installed correctly. For instructions on inserting your battery, see ["Changing batteries" on page 57](#).
- Make sure that the battery is fully recharged. For more information about recharging the battery, see ["Recharging the battery" on page 56](#).
- Make sure that the battery is calibrated correctly. For instructions on recalibrating your battery, see ["Extending battery life" on page 58](#).
- Let the battery return to room temperature.

Printer



Help

For more information about printer troubleshooting, click Start, then click Help and Support. Type the keyword **printer troubleshooting** in the Search Help box, then press ENTER.


The printer will not turn on

- Make sure that the printer is online. Many printers have an online/offline button that you may need to press.
- Make sure that the power cable is plugged into an AC power source.


The printer is on but will not print

- Check the cable between the printer and your notebook. Make sure that it is connected to the correct port.
- Make sure that the printer is online. Many printers have an online/offline button that you may need to press so the printer can start printing. Press the button to put the printer online.
- If the printer you want to print to is not the default printer, make sure that you have selected it in the printer setup.

► To set a default printer:

- 1 Click  (Start), then click Control Panel. The *Control Panel* window opens.
 - 2 Click Hardware and Sound.
 - 3 Click Printers.
 - 4 Right-click the name of the printer you want to be the default printer, then click Set as Default Printer.
- Reinstall the printer driver. See the guide that came with your printer for instructions on installing the printer driver.

You see a “Printer queue is full” error message

- Make sure that the printer is not set to work offline.
- To make sure that the printer is not set to work offline:
- 1 Click  (Start), then click Control Panel. The *Control Panel* window opens.
 - 2 Click Hardware and Sound.
 - 3 Click Printers.

- 4 If the printer status is Offline, right-click the name of the printer you want to use, then click Use Printer Online to set the printer to work online.
- Wait until files have been printed before sending additional files to the printer.
 - If you print large files or many files at one time, you may want to add additional memory to the printer. See the printer documentation for instructions for adding additional memory.

You see a "Printer is out of paper" error message
After adding paper, make sure that the printer is online. Most printers have an online/offline button that you need to press after adding paper.

Sound



Help

For more information about troubleshooting sound issues, click Start, then click Help and Support. Type the keyword **sound troubleshooting** in the Search Help box, then press ENTER.

You are not getting sound from the built-in speakers

- Make sure that headphones are not plugged into the headphone jack.
- Make sure that the volume control on your notebook is turned up. For more information about using your volume control, see ["Adjusting the volume" on page 37](#).
- Make sure that the Windows volume control is turned up. For instructions on how to adjust the volume control in Windows, see ["Adjusting the volume" on page 37](#).
- Make sure that Mute controls are turned off.

Status indicators

The status indicators are not functioning

- Make sure the status indicators are turned on. Press FN+F1 to toggle the indicators.

Touchpad

Touchpad is not working

- Make sure the touchpad is turned on. For more information, see “Changing mouse, touchpad, or pointing device settings” in your online *User Guide*.

The notebook is not responding when you click or tap on the touchpad

- Turn on the touchpad. For instructions on how to adjust the touchpad settings, see “Changing mouse, touchpad, or pointing device settings” in your online *User Guide*.

The pointer moves unexpectedly

- Clean the touchpad with a damp cloth (water only) and wipe it dry.
- Adjust the touchpad settings. For instructions on how to adjust the touchpad settings, see “Changing mouse, touchpad, or pointing device settings” in your online *User Guide*.

Video

The projector, monitor, or television is not working

- Make sure that you have pressed FN+F4 to activate the external monitor option.
- Make sure that the monitor is turned on and that the video cable is connected correctly.

Telephone support

Before calling Gateway Customer Care

If you have a technical problem with your notebook, follow these recommendations before contacting Gateway Customer Care:

- Make sure that your notebook is connected correctly to a grounded AC outlet that is supplying power. If you use a surge protector, make sure that it is turned on.

- If a peripheral device, such as a keyboard or mouse, does not appear to work, make sure that all cables are plugged in securely.
- If you have recently installed hardware or software, make sure that you have installed it according to the instructions provided with it. If you did not purchase the hardware or software from Gateway, see the manufacturer's documentation and technical support resources.
- If you have "how to" questions about using a program, see:
 - Online Help
 - Printed documentation
 - The Microsoft Windows documentation
 - The software publisher's Web site
- See the troubleshooting section of this chapter.



Warning

To avoid bodily injury, do not attempt to troubleshoot your notebook problem if:

- Power cords or plugs are damaged
- Liquid has been spilled into your notebook
- Your notebook was dropped
- The case was damaged

Instead, unplug your notebook and contact a qualified computer technician.

- Have your customer ID, serial number, and order number available, along with a detailed description of your problem, including the exact text of any error messages, and the steps you have taken.
- Make sure that your notebook is nearby at the time of your call. The technician may have you follow troubleshooting steps.
- The *Setup Guide* includes the Gateway Customer Care telephone number. For more information, see ["Gateway contact information" on page 2.](#)

APPENDIX A

Legal Information

- Important safety information
- Regulatory compliance statements
- Environmental information
- Notices

Important safety information



Warning

Always follow these instructions to help guard against personal injury and damage to your Gateway system.



Warning

Do not use Gateway products in areas classified as hazardous locations. Such areas include patient care areas of medical and dental facilities, oxygen-laden environments, or industrial facilities.



Warning

To reduce the risk of fire, use only No. 26 AWG or larger (for example, No. 24 AWG) UL-listed or CSA-certified telecommunication line cord for your dialup modem connection.

Your Gateway notebook is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this notebook, it is important that the safety instructions marked on the notebook and in the documentation are followed.

Setting up your system

- Read and follow all instructions marked on the notebook and in the documentation before you operate your notebook. Retain all safety and operating instructions for future use.
- Do not use this notebook near water or a heat source such as a radiator.
- Set up the notebook on a stable work surface.
- The notebook should be operated only from the type of power source indicated on the rating label.
- Openings in the notebook case are provided for ventilation. Do not block or cover these openings. Make sure you provide adequate space, at least 6 inches (15 cm), around the notebook for ventilation when you set up your work area. Never insert objects of any kind into the notebook ventilation openings.
- Some notebook are equipped with a three-wire power cord to make sure that the notebook is properly grounded when in use. The plug on this cord will fit only into a grounding-type outlet. This is a safety feature. If you are unable to insert the plug into an outlet, contact an electrician to install the appropriate outlet.
- If you use an extension cord with this notebook, make sure that the total ampere rating on the products plugged into the extension cord does not exceed the extension cord ampere rating.
- If your notebook is fitted with a TV Tuner, cable, or satellite receiver card, make sure that the antenna or cable system is electrically grounded to provide some protection against voltage surges and buildup of static charges.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill anything on the notebook. The best way to avoid spills is to avoid eating and drinking near your notebook.
- Some notebooks have a replaceable CMOS battery on the system board. There is a danger of explosion if the CMOS battery is replaced incorrectly. Replace the battery with the same or equivalent type recommended by the manufacturer. Dispose of batteries according to the manufacturer's instructions.
- When the notebook is turned off, a small amount of electrical current still flows through the notebook. To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before cleaning the notebook.
- Unplug the notebook from the wall outlet and refer servicing to qualified personnel if:
 - The power cord or plug is damaged.
 - Liquid has been spilled into the notebook.
 - The notebook does not operate properly when the operating instructions are followed.
 - The notebook was dropped or the cabinet is damaged.
 - The notebook performance changes.

Replacement parts and accessories

Use only replacement parts and accessories recommended by Gateway.

Regulatory compliance statements

Wireless guidance



Warning

Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11 (also known as wireless Ethernet or WiFi), wireless Internet, and Bluetooth communication devices are examples of devices that provide wireless communication.

Low power, Radio transmitting type devices (radio frequency (RF) wireless communication devices), may be present (embedded) in your notebook system. These devices may operate in the 2.4 GHz (i.e. 802.11b/g LAN & Bluetooth), 5.2 GHz (i.e. 802.11a LAN), and traditional cellular or PCS cellular bands (i.e. Cellular data modem). The following section is a general overview of considerations while operating a wireless device.

**Warning**

In environments where the risk of interference to other devices or services is harmful or perceived as harmful, the option to use a wireless device may be restricted or eliminated. Airports, Hospitals, and Oxygen or flammable gas laden atmospheres are limited examples where use of wireless devices may be restricted or eliminated. When in environments where you are uncertain of the sanction to use wireless devices, ask the applicable authority for authorization prior to use or turning on the wireless device.

**Warning**

If your notebook came equipped with an internal embedded wireless device, do not operate the wireless device unless all covers and shields are in place and the notebook is fully assembled.

**Caution**

Wireless devices are not user serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Please contact Gateway for service.

Additional limitations, cautions, and concerns for specific countries are listed in the specific country sections (or country group sections). The wireless devices in your system are only qualified for use in the countries identified by the Radio Approval Marks on the system rating label. If the country you will be using the wireless device in, is not listed, please contact your local Radio Approval agency for requirements. Wireless devices are closely regulated and use may not be allowed.

The power output of the wireless device or devices that may be embedded in your notebook is well below the RF exposure limits as known at this time. Because the wireless devices (which may be embedded into your notebook) emit less energy than is allowed in radio frequency safety standards and recommendations, Gateway believes these devices are safe for use. Regardless of the power levels, care should be taken to minimize human contact during normal operation.

Measurements have been performed to show that the RF exposure is below what is considered safe limits; however care should be taken to make sure the user or bystanders keep the transmitter away from their body when the wireless device is transmitting. The transmitting antenna installed in the top third of the lid should be used in a manner to maintain 8 inches (20 cm) from user's or bystander's bodies.

The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Some circumstances require restrictions on wireless devices.

**Caution**

Only use drivers approved for the country in which the device will be used. See the Gateway System Restoration Kit, or contact Gateway Customer Care for additional information.

**Important**

Every country has different restrictions on the use of wireless devices. Since your notebook is equipped with a wireless device, when traveling between countries with your notebook, check with the local Radio Approval authorities prior to any move or trip for any restrictions on the use of a wireless device in the destination country.

United States of America

**Caution**

Wireless devices are not user-serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Contact Gateway for service.

**Caution**

The transmitting device embedded in this notebook may not be used with any antenna other than the one provided with the notebook.

Federal Communications Commission (FCC) Intentional emitter per FCC Part 15

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band and/or 5.15 – 5.35 GHz band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in the United States of America if an FCC ID number is on the system label.

**Caution**

In order to comply with FCC requirements this transmitter must not be operated (or co-located) in conjunction with any other transmitter or antenna installed in the notebook.

The FCC has set a general guideline of 8 inches (20 cm) separation between the device and the body, for use of a wireless device near the body (this does not include extremities). This device should be used more than 8 inches (20 cm) from the body when wireless devices are on. The power output of the wireless device (or devices), which may be embedded in your notebook, is well below the RF exposure limits as set by the FCC.

The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Unintentional emitter per FCC Part 15

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Compliance accessories: The accessories associated with this equipment are: shielded video cable when an external monitor is connected. These accessories are required to be used in order to ensure compliance with FCC rules.

FCC declaration of conformity

**Caution**

Changes or modifications not expressly approved by Gateway could void the FCC compliance and negate your authority to operate the notebook.

**Caution**

Recycle or dispose of the used notebook properly according to federal, state and local laws.

Responsible party:

Gateway, Inc.
7565 Irvine Center Drive
Irvine, CA 92618
Phone: 800-846-2000

Product:

- AJ2
- AJ6
- AJ2A / AJ2B
- AJ6A / AJ6B

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

California Proposition 65 Warning

**Warning**

This product contains chemicals known to the State of California to cause cancer, birth defects, and/or other reproductive harm. For additional information regarding this product warning, go to www.gateway.com/prop65.

Mercury Warning

**(Hg) Warning**

THE LAMP IN THIS DISPLAY CONTAINS MERCURY. DISPOSE ACCORDING TO LOCAL, STATE, AND FEDERAL LAW.

Telecommunications per Part 68 of the Code of Federal Regulations (CFR 47) (applicable to products fitted with USA modems)

Your modem complies with Part 68 of the Code of Federal Regulations (CFR 47) rules. On the computer or modem card is a label that contains the FCC registration number and Ringer Equivalence Number (REN) for this device. If requested, this information must be provided to the telephone company.

A telephone line cord with a modular plug is required for use with this device. The modem is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68-compliant. See installation instructions for details.

The Ringer Equivalence Number (REN) is used to determine the number of devices which may be connected to the telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most areas, the sum of RENs should not exceed five (5). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

If this device causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. The telephone company may request that you disconnect the equipment until the problem is resolved.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

This equipment cannot be used on telephone company-provided coin service.

Connection to party line service is subject to state tariffs. Contact the state public utility commission or public service commission for information.

When programming or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform such activities in the off-peak hours such as early morning or late evenings.

The United States Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone fax machine unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent, an identification of the business, other entity, or other individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual. Refer to your fax communication software documentation for details on how to comply with the fax-branding requirement.

Canada

Industry Canada (IC) Intentional emitter per RSS 210



Caution

To prevent radio interference to licensed service or co-channel Mobile Satellite systems, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band and/or 5.15 – 5.35 GHz band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in Canada if an Industry Canada ID number is on the system label.



Caution

Wireless devices are not user-serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Contact Gateway for service.



Caution

The transmitting device embedded in this notebook may not be used with any antenna other than provide with the notebook.



Caution

The 802.11A radio LAN your notebook may have been equipped with operates in the same frequency range as high power radar, which has priority use, and may damage the radio LAN if both are present and being used in the same area.

As a general guideline, a separation of 8 inches (20 cm) between the wireless device and the body, for use of a wireless device near the body (this does not include extremities) is typical. This device should be used more than 8 inches (20 cm) from the body when wireless devices are on. The power output of the wireless device (or devices), which may be embedded in your notebook, is well below the RF exposure limits as set by Industry Canada.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Unintentional emitter per ICES-003

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

Telecommunications per Industry Canada CS-03 (for products fitted with an IC-compliant modem)

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operation, and safety requirements. The Department does not guarantee the equipment will operate to the users' satisfaction.

Before installing this equipment, users should make sure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the inside wiring associated with a single-line individual service may be extended by means of a certified connector assembly. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.



Warning

To avoid electrical shock or equipment malfunction do not attempt to make electrical ground connections by yourself. Contact the appropriate inspection authority or an electrician, as appropriate.

Users should make sure, for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

Japan

本装置は、第二種情報装置（住宅地域またはその隣接した地域において使用されるべき情報装置）で住宅地域での電波障害防止を目的とした情報処理装置等電波障害自主規制協議会（VCCI）基準に適合しております。

しかし、本装置をラジオ、テレビジョン受信機に、近接してご使用になると、受信障害の原因となることがあります。本書の説明にしたがって正しい取り扱いをしてください。

Japanese Modem Notice

本製品を日本で使用する場合は必ず日本国モードでご使用ください。他国のモードをご使用になると電気通信事業法（技術基準）に違反する行為となります。なお、ご購入時は初期値が日本国モードとなっておりますので、そのままご利用ください。

Laser safety statement



Warning

Use of controls or adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure. To prevent exposure to laser beams, do not try to open the enclosure of a CD or DVD drive.

All Gateway systems equipped with CD and DVD drives comply with the appropriate safety standards, including IEC 825. The laser devices in these components are classified as "Class 1 Laser Products" under a US Department of Health and Human Services (DHHS) Radiation Performance Standard. Should the unit ever need servicing, contact an authorized service location.

Environmental information

The product you have purchased contains extracted natural resources that have been used in the manufacturing process. This product may contain substances known to be hazardous to the environment or to human health.

To prevent releases of harmful substances into the environment and to maximize the use of our natural resources, Gateway provides the following information on how you can responsibly recycle or reuse most of the materials in your "end of life" product.

Waste Electrical and Electronic Equipment (commonly known as WEEE) should never be disposed of in the municipal waste stream (residential garbage collection). The "Crossed-Out Waste Bin" label affixed

to this product is your reminder to dispose of your "end of life" product properly. Substances such as glass, plastics, and certain chemical compounds are highly recoverable, recyclable, and reusable. You can do your part for the environment by following these simple steps:



- When your electrical or electronic equipment is no longer useful to you, "take it back" to your local or regional waste collection administration for recycling.
- In some cases, your "end of life" product may be "traded in" for credit towards the purchase of new Gateway equipment. Call Gateway to see if this program is available in your area.
- If you need further assistance in recycling, reusing, or trading in your "end of life" product, you may contact us at the Customer Care number listed in your product's user guide and we will be glad to help you with your effort.

Finally, we suggest that you practice other environmentally friendly actions by understanding and using the energy-saving features of this product (where applicable), recycling the inner and outer packaging (including shipping containers) this product was delivered in, and by disposing of or recycling used batteries properly.

With your help, we can reduce the amount of natural resources needed to produce electrical and electronic equipment, minimize the use of landfills for the disposal of "end of life" products, and generally improve our quality of life by ensuring that potentially hazardous substances are not released into the environment and are disposed of properly.

For additional recycling information specific to your area, please go to www.gateway.com/recycle.html.

Notices

Copyright © 2008 Gateway, Inc.
All Rights Reserved
7565 Irvine Center Drive
Irvine, CA 92618 USA

All Rights Reserved

This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent in writing from Gateway.

The information in this manual has been carefully checked and is believed to be accurate. However, changes are made periodically. These changes are incorporated in newer publication editions. Gateway may improve and/or change products described in this publication at any time. Due to continuing system improvements, Gateway is not responsible for inaccurate information which may appear in this manual. For the latest product updates, consult the Gateway Web site at www.gateway.com. In no event will Gateway be liable for direct, indirect, special, exemplary, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages.

In the interest of continued product development, Gateway reserves the right to make improvements in this manual and the products it describes at any time, without notices or obligation.

Trademark Acknowledgments

Gateway and the Black-and-White Spot Design are trademarks or registered trademarks of Gateway, Inc. in the U.S. and other countries. Intel, Intel Inside logo, and Pentium are registered trademarks of Intel Corporation. Microsoft, MS, and Windows are trademarks or registered trademarks of Microsoft Corporation. All other product names mentioned herein are used for identification purposes only, and may be the trademarks or registered trademarks of their respective companies.

Macrovision statement

If your notebook has a DVD drive and an analog TV Out port, the following paragraph applies:

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Index

A

- AC adapter
 - connecting 18
 - connector 7
 - international adapters 60
- accessories
 - safety precautions 119
- acoustic handset coupler 68
- application key 29
- arrow keys 29
- audio
 - adjusting volume 38
 - back button 31
 - headphone jack 7
 - Increase volume 36
 - microphone jack 7
 - muting 35, 38
 - next button 31
 - pause button 31
 - play button 31
 - stop button 31
 - troubleshooting 113
- audio CD
 - cleaning 77
 - inserting 45, 46
- automobile power adapter 60

B

- battery
 - alternate power sources 60
 - bay 57
 - calibrating 76
 - changing 57
 - charge indicator 27, 56
 - charge status 56
 - charging 18, 56
 - conserving power 58
 - extending life 76

- fuel gauges 76
- icons 56
- installing 57
- latch 10
- life span 76
- locating 10
- managing power 58
- maximizing
 - performance 58
- monitoring charge 56
- recharging 18, 56
- release latch 10
- replacing 57
- storing 77
- troubleshooting 111

bays

- battery 57
- hard drive 11
- memory 10

Bluetooth

- system key 30
- turning off 30, 41
- turning on 30, 41

brightness

- adjusting 37

broadband modem

- connecting 20

C

- cable lock 7
- cable modem 7, 20
 - connecting 20
 - troubleshooting 101
- camera
 - See digital camera
- Caps Lock indicator 26, 27
- cards
 - inserting memory card 47
 - memory card slot 7
 - memory cards

- supported 47
- removing memory card 47
- slots 47
- troubleshooting memory card 101
- CD
 - cleaning 77
 - controlling playback 31, 35
 - eject button 45, 46
 - inserting 45, 46
 - manual eject hole 45, 46
- CD drive
 - See DVD drive
- cellular phone
 - memory cards 47
- Certificate of Authenticity 3
- changing
 - battery 56
- cleaning
 - audio CD 77
 - case 75
 - CD 77
 - DVD 77
 - keyboard 75
 - LCD panel 76
 - notebook exterior 74
 - screen 76
- clicking 33
- closing unresponsive program 25
- connecting
 - AC adapter 18
 - cable modem 20
 - dial-up modem 21
 - DSL modem 20
 - external keyboard 28
 - external monitor 50
 - keyboard 28
 - mouse 33
 - printer 48
 - projector 50
 - scanner 48
 - television 50
 - to wired Ethernet 20
 - USB device 49
 - video camera 49
- connections
 - audio 7
 - broadband Internet 7, 20
 - cable modem 7, 20
 - dial-up modem 8, 21
 - digital camera 7, 8
 - DSL modem 7, 20
 - Ethernet 7
 - external audio 7
 - external diskette drive 7, 8, 49
 - external speakers 7
 - flash drive 7, 8, 49
 - HDMI (TV) out 7
 - headphone 7
 - keyboard 7, 8
 - microphone 7
 - modem (dial-up) 8
 - monitor (VGA) 7, 51
 - mouse 7, 8
 - network 7
 - power 7, 18
 - printer 7, 8
 - projector 51
 - scanner 7, 8
 - speaker 7
 - television 50
 - USB 7, 8, 48
 - VGA 7, 51
 - wired Ethernet 20, 21
 - wired network 21
- copyright notice 127
- D
 - default printer 112
 - dialing codes 68
 - dial-up modem 8, 21
 - adjusting volume 105
 - diagnostics 104
 - dialing properties 102
 - troubleshooting 101
 - using while traveling 68

- digital audio 48
- digital camera
 - memory card reader 7, 47
 - USB port 7, 8
- digital video 48
- directional keys 29
- diskette
 - troubleshooting 90
- diskette drive
 - troubleshooting 90
- display
 - brightness 37
 - switching 30
 - troubleshooting 91
- display properties
 - adjusting 52
- documentation
 - User Guide 2
- double-clicking 34
- dragging 34
- drivers
 - re-installing 78, 81
- drives
 - Blu-ray disc 45
 - DVD 44
 - DVD/CD-RW 8, 44
 - DVD±RW 8, 45
 - hard drive 11
 - identifying drive types 44
 - multi-format DVD±RW 8, 45
 - troubleshooting 90, 92, 94
 - types 44
- DSL modem 7, 20
 - connecting 20
 - troubleshooting 101
- DVD
 - cleaning 77
 - controlling playback 31
 - eject button 45, 46
 - inserting 45, 46
 - manual eject hole 45, 46
 - playing 50
 - regional code 45
 - troubleshooting 92
- DVD drive
 - identifying 44
 - locating 8
 - troubleshooting 92
 - using 44
- DVD/CD-RW drive
 - See DVD drive
- DVD±RW drive
 - See DVD drive
- E
- eject button
 - CD 45, 46
 - DVD 45, 46
- eject hole
 - CD 45, 46
 - DVD 45, 46
- EmPower power adapter 60
- ergonomics 16
- Ethernet
 - connecting wired 20
 - jack 7, 20
- external monitor 7, 30
- EZ Pad touchpad
 - See touchpad
- F
- fan 6, 9
- faxes
 - troubleshooting 104
- files
 - opening 34
 - troubleshooting 94
- fingerprint reader
 - troubleshooting 94
- Fn key 29, 30
- folders
 - opening 34
- function keys 29

G

Gateway

- contact information 2
- model number 3
- serial number 3
- Support 3

Gateway Recovery Center

- re-installing drivers 81
- re-installing programs 81
- re-installing software 81

H

hard drive

- bay 11
- indicator 26
- troubleshooting 94

HDMI (TV) out jack 7

HDMI port 30, 48, 50

headphone jack 7

Hibernate mode 24, 60

hot-swapping 48

Hybrid Sleep

- mode 30, 61
- system key 30
- turning on 64

I

IEEE 802.11

- using while traveling 69

indicators

- See status indicators

installing

- battery 57
- devices 48
- digital camera 48
- digital video camera 48
- peripheral devices 48
- printer 48
- scanner 48

Internet

- troubleshooting 95

Internet chat program 36

J

jacks

- See connections

K

Kensington cable lock 70

- lock slot 7

key combinations 30

keyboard

- buttons 28
- cleaning 75
- connecting 28
- features 28
- keys 28
- locating 12
- troubleshooting 96
- USB port 7, 8

keys

- application 29
- arrow 29
- directional 29
- Fn 29, 30
- function 29
- Hybrid Sleep 30
- LCD/CRT 30
- navigation 29
- Sleep 30
- system 29
- system key combinations 30
- toggle display 30
- Windows 29
- wireless Ethernet 35

L

labels

- Microsoft Certificate of Authenticity 3
- model number 2
- serial number 2

latch

- battery 10

LCD panel

- cleaning 76
- switching display 30

- troubleshooting 91
- LCD/CRT system key 30
- line protector 68
- line tester 68
- lock
 - cable 70
 - Kensington cable 7
- M**
- maintenance
 - cleaning 74, 77
- Media Center
 - troubleshooting 97
- media reader
 - See* memory card reader
- memory
 - bay 10
 - troubleshooting 100
- memory card reader
 - inserting card 47
 - locating 7
 - memory cards
 - supported 47
 - removing card 48
 - troubleshooting 101
 - using 47
- microphone
 - jack 7
- Microsoft Certificate of Authenticity 3
- model number 3, 70
- modem
 - cable 7, 20
 - connecting 20, 21
 - dial-up 22, 68
 - DSL 7, 20
 - international adapter 68
 - jack (dial-up) 8, 22
 - troubleshooting 101
- monitor
 - adding external 50
 - color quality 53
 - port 7
 - screen resolution 53
 - troubleshooting
 - external 114
 - using 30
 - using external 53
- mouse
 - connecting 33
 - troubleshooting 105
 - USB port 7, 8
- moving
 - pointer 33
 - screen objects 34
- MP3 player
 - memory cards 47
- multimedia
 - adjusting volume 38
 - using DVD drive 44
- mute button 35, 36
- muting sound 35, 36, 38
- MyBackup key 35
- N**
- navigation keys 29
- network
 - troubleshooting 106, 108
- network jack 7, 21
- networking
 - turning off Bluetooth 41
 - turning off wireless Ethernet 40
 - turning on Bluetooth 41
 - turning on wireless Ethernet 40
- NTSC/PAL jack 50
- O**
- opening
 - files 34
 - folders 34
 - programs 34
 - shortcut menu 34

P

- packing notebook 68
- password 70, 110
 - startup 70
 - supervisor 70
 - user 70
- PDA
 - memory cards 47
- peripheral devices 48
- Plug and Play devices
 - USB support for 48
- pointer
 - identifying 32
 - moving 33
- ports
 - See connections
- power
 - AC adapter 18, 60
 - advanced settings 62, 64
 - alternate sources 60
 - automobile/airplane adapter 60
 - battery 56, 57, 58
 - button 8, 30
 - changing modes 61
 - changing plans 62
 - connector 7, 18
 - conserving battery power 58
 - EmPower adapter 60
 - extending battery life 58
 - Hibernate mode 60
 - Hybrid Sleep mode 30, 60
 - indicator 24, 27
 - international adapter 71
 - management 55, 58
 - plans 62
 - Sleep mode 24, 30, 60
 - source problems 20
 - SpeedStep settings 62
 - status indicator 27
 - surge protector 20
 - troubleshooting 111
 - turning off notebook 24
 - turning on notebook 23
- PowerSave key 35
- printer
 - default 112
 - installing 48
 - troubleshooting 111
 - USB port 7, 8
- programs
 - closing unresponsive 25
 - opening 34
 - re-installing 78, 81
- projector
 - adding 50
 - color quality 53
 - port 7
 - screen resolution 53
 - troubleshooting 114
 - using 30, 53

R

- radio approval authorities 69
- radio frequency wireless connections 69
- rebooting notebook 25
- recharging battery 56
- recovering
 - defaults 84
 - drivers 78, 81
 - programs 78, 81
 - software 78, 81
 - system 78
 - with Gateway Recovery Center 81
 - with Windows System Restore 82
- Recycle Bin
 - deleting files 94
 - emptying 94
- regional code
 - DVD 45
- re-installing

- defaults 84
- drivers 78, 81
- programs 78, 81
- software 78, 81
- Windows 78
- with Gateway Recovery Center 81
- with Windows System Restore 82
- replacing
 - See installing
- resetting notebook 25
- restarting notebook 25
- restoring
 - defaults 84
 - drivers 78, 81
 - programs 78, 81
 - software 78, 81
 - system 78
 - with Gateway Recovery Center 81
 - with Windows System Restore 82
- right-clicking 34
- S**
- safety
 - avoiding repetitive strain 18
 - caring for notebook 74
 - general precautions 118
 - guidelines for troubleshooting 88
 - posture 17
 - reducing eye strain 16
 - setting up computer 17
 - sitting at computer 17
- scanner
 - installing 48
 - USB port 7, 8
- screen
 - resolution 53
 - troubleshooting 91, 114
- Screen blank 31
- screen objects
 - getting information 34
 - moving 34
 - selecting 33
- scroll zone 32
- security
 - startup password 70
 - while travelling 70
- security features
 - Kensington cable lock 7
- serial number 3, 70
- setting up
 - safety precautions 118
- shipping notebook 68
- shortcut menus
 - accessing 34
- shortcuts
 - opening menu 34
- shutting down notebook 24, 25
- Sleep
 - mode 24, 30, 61
 - system key 30
- software
 - re-installing 78, 81
- sound
 - adjusting 38
 - controls 38
 - muting 35, 36, 38
 - troubleshooting 113
- Speakers 12
- speakers
 - jack 7
- SpeedStep technology 62
- starting
 - notebook 23
 - programs 34
- startup password 70
- status indicator
 - wireless Ethernet 26
- status indicators
 - battery charge 27, 56
 - Caps Lock 27
 - drive activity 26
 - hard drive 26

- location 12
- Num Lock 26
- power 27
- toggle on or off 113
- troubleshooting 113
- supervisor password 70
- surge protector 20
- Suspend 30
- system identification label 3
- system keys
 - combinations 30
 - locating 29
- T**
- technical support
 - Support 3
 - tips before contacting 114
- telephone
 - acoustic handset
 - coupler 68
 - line protector 68
 - line tester 68
- telephone support 114
- television
 - HDMI out jack 7, 50
 - playing DVD on 50
 - viewing display on 50
- Touch panel 12
- touch panel 35
- touchpad
 - buttons 32, 33
 - clicking 33
 - double-clicking 34
 - dragging screen objects 34
 - locating 12
 - moving pointer 32, 33
 - moving screen objects 34
 - opening files, folders, and programs 34
 - opening shortcut menu 34
 - right-clicking 34
 - scroll zone 32
 - selecting screen objects 33
 - troubleshooting 114
- Touchpad toggle 35
- travel tips 67
- troubleshooting
 - audio 113
 - battery 111
 - diskette drive 90
 - display 91
 - DVD drive 92
 - external monitor 114
 - faxes 104
 - files 94
 - general guidelines 88
 - hard drive 94
 - Internet connection 95, 103
 - keyboard 96
 - LCD panel 91
 - Media Center 97
 - memory 100
 - memory card reader 101
 - modem 101
 - mouse 105
 - network 106, 108
 - passwords 110
 - power 111
 - printer 111
 - projector 114
 - safety guidelines 88
 - screen 91, 114
 - screen area 91
 - screen resolution 91
 - sound 113
 - status indicators 113
 - technical support 114
 - telephone support 114
 - touchpad 114
 - video 114
 - Web site connection
 - speed 96
 - wired Ethernet 106
 - wireless Ethernet 108

- wireless network 108
- turning off
 - Bluetooth 30
 - notebook 24, 25
 - wireless Ethernet 40
 - wireless network 30
- turning on
 - Bluetooth 30
 - notebook 23
 - wireless Ethernet 35
 - wireless network 35, 40
- TV out (HDMI) jack 7, 50
- U**
- USB
 - connecting device 49
 - port 48
- USB port 7, 8
- user password 70
- V**
- ventilation 6, 9
- VGA port 7, 51
- video
 - HDMI out jack 7
 - monitor port 7
 - projector port 7
 - troubleshooting 114
 - VGA port 7
- video camera
 - connecting 49
- volume
 - adjusting 38
 - adjusting modem 105
 - controls 38
 - muting 35, 36, 38
 - troubleshooting 113
- W**
- waking up notebook 24
- webcam 13, 36
- Windows
 - key 29
 - Product Key Code 3
- Windows System Restore 78
- wired Ethernet
 - troubleshooting 106
- wireless Ethernet
 - button 35
 - status indicator 26
 - troubleshooting 108
 - turning off 40
 - turning on 40
 - using while traveling 69
- wireless network
 - troubleshooting 108
- working safely 16

MU.WBF00.001 MAN SJV70 REF GDE R0



MUWBF00001